

nowFOREVER

B1000 Series Inverter

User manual

1 Inspection.....	1
2 Specifications and Optional Parts.....	2
2.1 Specifications.....	2
2.2 Products Series Introduction.....	3
2.2.1 B1000 Models.....	3
2.2.2 Ordering information of B1000 series.....	4
2.2.3 Demision.....	5
2.2.4 LED Keypad Display Unit Size.....	5
2.2.5 Optional Parts	6
3 Installation and Wiring.....	7
3.1 Installation	7
3.2 Wiring.....	8
3.2.1 Overview.....	8
3.2.2 Power Terminals	9
3.2.3 Control Circuit Wiring.....	9
4 Operation Procedures.....	16
4.1 Operation Guide	16
4.2 LED Keypad	16
4.2.1 Keypad Function Explanation	16
4.2.2 Indicator Description	17
4.2.3 Parameter Setting Method	18
4.2.4 Motor parameters self learning.....	18
4.2.5 Password setting	19

5 Parameters..... 20

5.1 Basic Parameters (P0)	20
5.2 Motor Parameter (P1)	23
5.3 Start/Brake Parameter (P2)	26
5.4 Flux vector control parameters (P3)	28
5.5 Current vector control parameter (P4)	30
5.6 Multi-function terminal (P5)	31
5.7 Output terminal control parameters (P6)	39
5.8 Close-loop PID control (P7)	44
5.9 MS parameters (P8)	47
5.10 Enhanced function (P9)	47
5.11 Display Control Parameters (PA)	52
5.12 Communication (PB)	54
5.13 Professional parameters (PC)	55
5.14 PLC parameters (PD)	55
5.15 Constant-pressure water supply (PE)	59
5.16 Protection (PL)	59
5.17 Operation Time and Temperature of Cooling Fan (PN)	62
5.18 Protection of Parameters (PP)	62
5.19 Factory Default (PU)	63

6 Troubleshooting 64

7 Maintenance 71

7.1 Routine Maintenance.....	71
7.2 Periodic Maintenance	72
7.3 General Inspection:.....	72

7.4 Replacing Easily-worn Parts	73
7.5 Storing Inverters	74
7.6 Warranty.....	74

8 Parameter profiles 75

9 Communication Protocol..... 101

9.1 Communication Mode	101
9.2 Protocol Format	101
9.3 Protocol Function	102
9.4 Instruction	108
9.5 The scaling rule of Inverter	110

10 Warranty Agreement错误！未定义书签。

1 Inspection

Don't install or use any inverter that is damaged or have fault parts otherwise may cause injury.

Check the following items when unpacking the inverter.

1. Ensure there is operation manual and warranty cards in the packing box.
2. Inspect the entire exterior of inverter to ensure there are no scratches or other damaged caused by transportation.
3. Check the nameplate and ensure it is what you ordered.
4. Ensure the optional parts are what you need if you have ordered any optional parts.

Please contact the local agent if there is any damage in the inverter or the optional parts.

2 Specifications and Optional Parts

2.1 Specifications

Table2-1 B1000 Specifications

Item		Description
Input	Rated voltage;	B1000-4Txxxxx: 380V~440V; 50Hz/60Hz
	Frequency	B1000-2Sxxxxx: 200V~240V; 50Hz/60Hz
	Permissible fluctuation range	Voltage constant fluctuate $\leq \pm 10\%$, Transient fluctuate: $-15\% \sim +10\%$, out of balance voltage rate: $\leq 3\%$, frequency fluctuation: $\leq 5\%$
Output	Rated voltage	B1000-4Txxxxx: 0~380V/440V B1000-2Sxxxxx: 0~200V/240V
	Frequency	0Hz~650Hz
Control functions	Modulation mode	Flux vector PWM modulation
	Speed range	1: 100
	Starting torque	180% rated torque at 0.5Hz
	Accuracy of speed at steady state	$\leq \pm 0.5\%$ rated synchronous speed
	Torque boost	Auto torque boost, Manual torque boost
	Acc/Dec curve	Linear
	Jog	Jog frequency, Acc/Dec time, Jog interval are adjustable
	Multi-speed operation	15 sections of frequency. Able to achieve through the built-in PLC or terminals.
	Closed-loop control	Analog closed-loop
	Auto voltage regulation	Constant output voltage even if electric network voltage fluctuates
	Auto current limiting	Operating current is limited automatically to avoid frequent tripping of the inverter
	Auto carrier-wave regulation	Adjust the carrier frequency automatically according to the load characteristics;
Special function	Internal counter	Counting the external pulse signal through X terminals
	Methods of inputting commands	keypad panel, terminals and serial port
	Methods of setting up frequency	Digital setting, A land communication

Item		Description
	Auxiliary frequency	Flexible auxiliary frequency selectable
	Analog output terminals	0/4~20mA and 0/2~10V(selectable)
Protection function		Phase loss failure, Over/Under current, Over/Under voltage protection, Overheat and overload protection
Environment	Operating environment	In-door, not subject to direct sunlight, no dust, corrosive, flammable gas, oil mist, steam, water, or salt, etc
	Altitude	Less than 1000m, derating is required more than 1000m
	Ambient temperature	-10℃~+40℃, derating is required from 40~50℃; Increase every 1 above 40℃, derating 2%, highest temperature allowed: 50℃
	Humidity	Less than 95% RH, no condensing
	Vibration	Less than 5.9m/s ² (0.6g)
	Storage temperature	-40℃~+70℃
Enclosure	Protection level	IP20
	Cooling	Fan cooling, natural cooling
Mounting mode		Mounted in a cabinet

2.2 Products Series Introduction

2.2.1 B1000 Models

Table2-2 Inverter series

Model	Rated capacity (KVA)	Rated output current (A)	Applicable motor power (KW)
B1000-2S0004G	1.0	2.5	0.4
B1000-2S0007G	1.5	4.0	0.75
B1000-2S0015G	3.0	7.5	1.5
B1000-2S0022G	4.0	10.0	2.2

Model	Rated capacity (KVA)	Rated output current (A)	Applicable motor power (KW)
B1000-4T0007G	1.5	2.3	0.75
B1000-4T0015G	3.0	3.7	1.5
B1000-4T0022G	4.0	5.0	2.2

2.2.2 Ordering information of B1000 series

Please refer to Figure2-1a and Figure 2-1b.

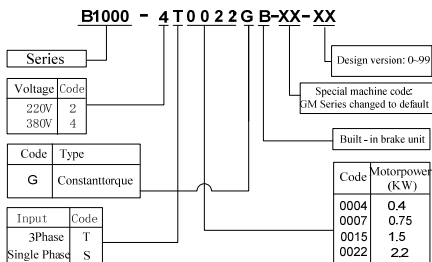


Table2-1a Explanations of inverter models

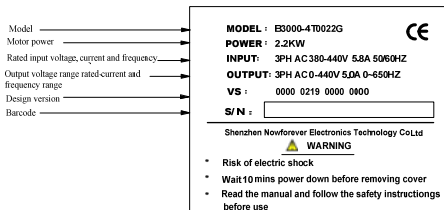


Table2-1b B1000 series nameplate

2.2.3 Demission

Please refer to Figure 2-2

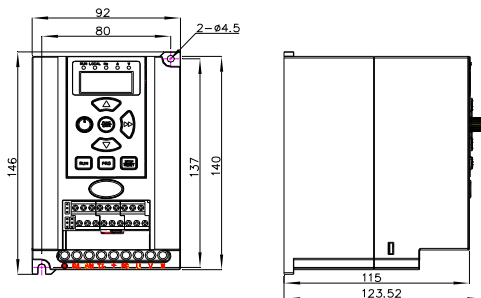


Figure2-2 B1000 series inverter size

Note: Net weight, 1.04KG

Gross weight (include user manual after package), 1.22KG

2.2.4 LED Keypad Display Unit Size

Through it, operation and configuration of the inverter can be done. Please refer to its size and configuration in Figure 2-3.

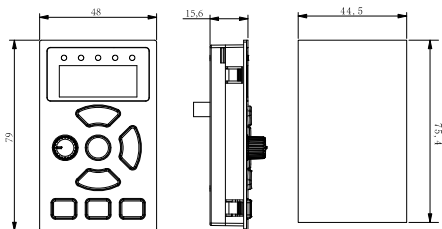


Figure2-3 Keypad display unit

Gross weight (with package and manual) 1.22Kg

Model No.	L(mm)	W(mm)	H(mm)	Weight(Kg)
B1000-2S0004G	146	92	123.52	1.22
B1000-2S0007G				
B1000-2S0015G				
B1000-2S0022G				
B1000-4T0007G				
B1000-4T0015G				
B1000-4T0022G				

2.2.5 Optional Parts

Table 2-3: recommended braking resistor

Model	Suggested value of resistance	Suggested power
B1000-4T0007G	250-350Ω	100W
B1000-4T0015G	200-300Ω	200W
B1000-4T0022G	100-250Ω	250W

B1000 series inverter (3phase product) is equipped with braking unit. If there is a need for energy-consuming braking, please select a braking resistor in Table2-3.

The above Table 2-3 is a guide reference only, users can choose different braking resistance and power according to each application. However, please be remembered that the braking resistance shouldn't be less than the above recommended value, but the power is allowed to be exceed than the recommend numbers. Users need to select the right braking resistors according to each application case, there are quite a few aspects which will determine your choice of the resistors, such as the power of the motor, system inertia, deceleration time, the energy of the load etc. The greater the system inertia is, the shorter the required deceleration time is required, then the braking frequency will be increased, which means you need to choose a bigger power braking resistor with a lower braking resistance.

Note: the 220V single phase inverter has no brake unit built in.

3 Installation and Wiring

3.1 Installation

1. Mount the inverter vertically indoors, with good ventilative conditions.
2. Ambient temperature should be within the range of $-10^{\circ}\text{C} \sim 40^{\circ}\text{C}$. If the temperature is higher than 40°C , the inverter should be derated and forced heat dissipation is required.
3. Humidity should be lower than 90%, non-condensing;
4. Mount in the location free of direct sunlight, dust, metal powder, corrosive gas or combustible gas;
5. Mount in the location where vibration is less than 5.9m/s^2 (0.6g) ;
6. Dust-free, floating fiber and metal particles;
7. Install flat solid, no vibration;
8. Away from electromagnetic interference source.

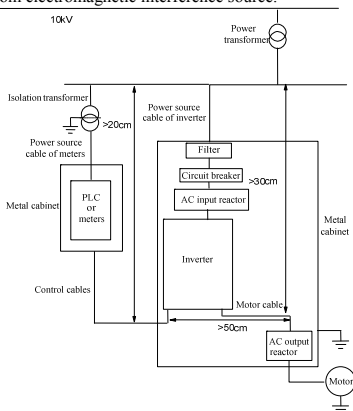


Figure 4-1 Installation of the inverter

3.2 Wiring

3.2.1 Overview

You should finish the power circuit and control circuit wiring.

The figure below is the systematic wiring of the inverter

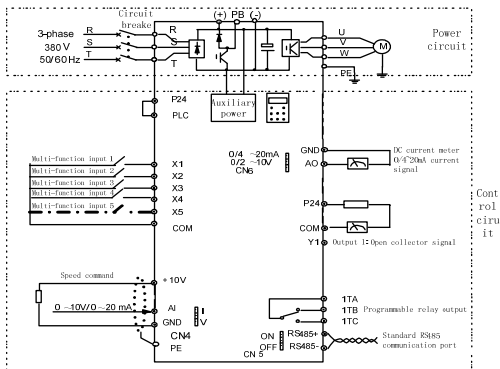


Figure 4-2 Systematic Wiring Diagram

Table 4-1 Recommended MCCB Capacity and Copper Cable Section Area

Model	MCCB Circuit breaker (A)	Power circuit (mm ²)				Control cable (mm ²)
		Input cable	Braking line	Output cable	Earth cable	
B1000 0001 2S	16	1.5	1.0	1.0	2.5	1.0
B1000 0002 2S	20	2.5	1.0	1.0	2.5	1.0
B1000 0003 2S	32	4.0	1.5	2.5	4.0	1.0
B1000 0004 2S	50	6.0	1.5	2.5	6.0	1.0
B1000 0002 4T	10	1.0	1.0	1.0	2.5	1.0

Model	MCCB Circuit breaker (A)	Power circuit (mm ²)				Control cable (mm ²)
		Input cable	Braking line	Output cable	Earth cable	
B1000 0003 4T	16	1.5	1.0	1.5	2.5	1.0
B1000 0004 4T	16	1.5	1.5	1.5	2.5	1.0

3.2.2 Power Terminals

1. Definitions of power terminals



	R/L	S/N	T/-	+	PB	U	V	W
---	-----	-----	-----	---	----	---	---	---

Table 4-2 Definitions of power terminals

Terminal name	Description
R、S、T /L、N	3-phase AC input / 1-phase AC input
(+)、PB	External braking resistor
(+)、(-)	DC positive, negative bus input
U、V、W	3-phase AC outputs
	Protective earth

3.2.3 Control Circuit Wiring

Control Terminals and Jumpers

The terminal row and jumpers on control panel is CN4, CN5, CN6
Control terminals functions are listed in Table 3-4, Jumper's functions
in 3-5. Be sure to set the jumper and wire the terminals properly. It is
recommended to use cable of section area bigger than 1mm².

Table 4-3 Function of control terminals

Mark	Function
CN8- CN10	Analog I/O, digital I/O, relay outputs

Mark	Function&Setting	Default
CN4	CCI current/voltage input selection I: 0~20mA current signal V: 0~10V voltage signal	0~+10V
CN5	485 terminal resistor selection: ON: 120Ω terminal resistor OFF: No terminal resistor.	No terminal resistor
CN6	AO current/voltage input selection 0/4~20mA: AO current signal 0/2~10V: AO voltage signal	0~+10V

Terminal strip layout

The layout is shown below:

GND	485+	485-	X1	X2	X3	X4	X5	Y1	
	+10V	AO	AI	COM	PLC	P24	TC	TB	TA

TA-TB: Normally closed; TA-TC: Normally open

Table 4-5 Terminal function table

Category	Terminals	Name	Function	Specification
Communication	485+	RS485 communication port	RS485+ (differential signal)	Standard RS-485 communication port, Please use twisted-pair cable or shielded cable
	485-		RS485-(differential signal)	
Analog input	AI	Analog input	Accepting analog voltage/current input.CN4 can select voltage or current input mode, Voltage input mode is the default (Reference ground: GND)	Input voltage range:0~10V (input resistance:100kΩ) Input current range:0~20mA (input resistance:500Ω) resolution:1/2000

Category	Terminals	Name	Function	Specification
Analog output	AO	Analog output	Be able to output analog voltage/current, Jumper CN6 can select voltage or current input mode. Voltage input mode is the default mode. Refer to P6.04 for details (reference ground: GND)	Output current range: 0/4~20mA Output voltage range: 0/2~10V
Digital input	X1~X5	Multi-functional digital inputs 1~5	Can be defined as multi-functional digital inputs, see Section 7.6 Reference ground: COM	Optical-isolator 2-way input input resistance: 2k Ω maximum input frequency: 200Hz Input voltage range: 9~30V
	PLC	Common terminal	Common terminal for multi-functional inputs	
	P24	+24V supply	Providing +24V power supply	Output: +24V, set point accuracy: $\pm 10\%$ Max output current: 200mA
	COM	+24V common terminal	Isolated internally with GND	Isolated internally with GND
Digital output	Y1	Open collector output 1	Programmable terminals, defined as multi-function digital outputs, see Section 7.7.	Optical-isolator output: 24VDC/50mA

Category	Terminals	Name	Function	Specification
Power supply	+10V	+10V power supply	Provide +10V power supply	Output: +10V, Setpoint accuracy: $\pm 10\%$ Max. output current: 100mA
	GND	GND of +10V power supply	reference ground of analog signal and 10V power supply	Isolated internally with COM
Others	TA/TB/TC	Relay output	TA, TB and TC can be defined as multi-functional digital output signals. please refer to Section 7.7	TA-TB: normally closed; TA-TC: normally open Contact capacity: 250Vac/2A ($\cos\phi=1$), 250Vac/1A ($\cos\phi=0.4$), 30 Vdc/1A

The PLC terminal can sink or source current. Wire connections X1~X5 is flexible and the typical wiring is shown below:

① Connection method 1

It is default to use the inverter's internal power source 24V, i.e. PLC connected with P24.

If you want to use external power supply, make sure to remove the wire between PLC and P24.

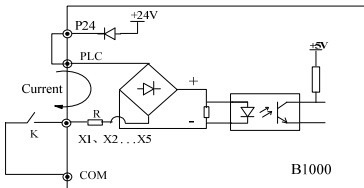


Figure 4-3 External power supply wiring diagram

② Connection Method 2

Inverter's internal +24V power supply is used and the external controller uses PNP transistors whose common emitters are connected, as shown in Figure 3-14.

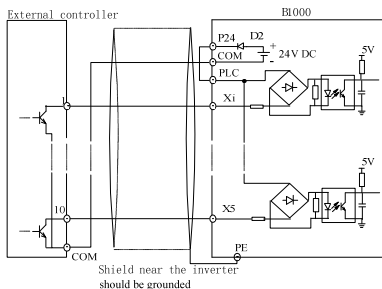


Figure 4-4 Internal +24V wiring diagram (drain)

Inverter's internal +24V power supply is used and the external controller uses PNP transistors whose common emitters are connected. (Remote the wire between PLC and P24) .

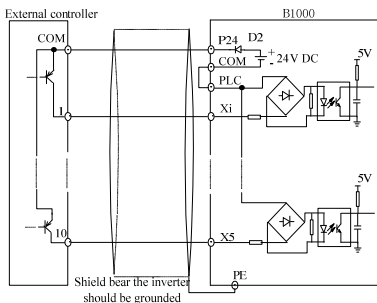


Figure 4-5 Internal +24V wiring diagram (drain)

When using External power supply, remember to disconnect PLC and P24

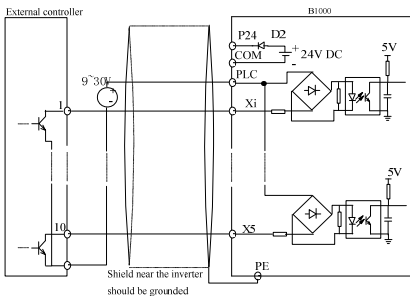


Figure 4-6 External power supply wiring (drain)

External power supply wiring (source) (Remember to disconnect PLC and P24

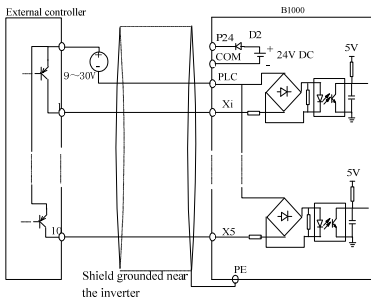


Figure 4-7 External power supply wiring (source)

5) Multi-function Output Terminal Wiring

1、rminal Y1 can use the internal 24V power supply, see the figure below:

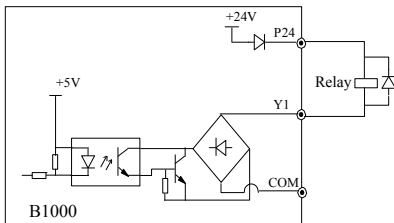


Figure 4-8 Multi-function output terminal wiring1

2、rminal Y1 can also use external power (9~30V) supply:

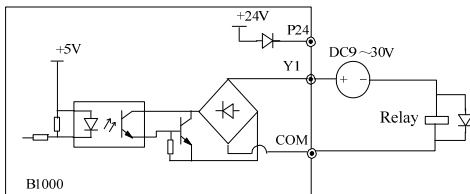


Figure 4-9 Multi-function output terminal wiring2

Note:


Don't short terminals P24 and COM, otherwise the control board may be damaged.

4 Operation Procedures

4.1 Operation Guide

4.2 LED Keypad

LED keypad display unit is to receive command and display parameters.

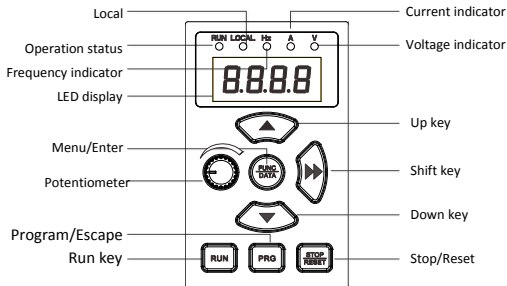



Keypad diagram

4.2.1 Keypad Function Explanation

Keys on the LED keypad display unit refer to the function of each key in Table 6-1.

Table 6-1 Key's function

Key	Name	Function
PRG	Program/Esc key	To shift between program state and Esc state
FUNC/DATA	Function/Data key	To shift between function code menus, confirm modification
▲	Increase key	To increase data or function code number

Key	Name	Function
	Decrease key	To decrease data or function code number
	Shift key	To scroll over the displayed parameters, such as voltage、frequency. To select the digit to be modified
RUN	Run key	In the keypad operating mode, press the key to start running
/	Stop/Reset key	In keypad mode, stop the inverter or reset in case of alarm or fault; Terminal control mode: reset in case of alarm or fault
STOP/RESET	Potentiometer	Set frequency

4.2.2 Indicator Description

Functions of the indicators on the keypad:

Indicator	Meaning	Color	Mark
Status indicator	ON: the inverter is running OFF: the inverter is no output	Green	RUN
Frequency indicator	ON: current LED display is frequency	Green	Hz
Current indicator	ON: current LED display is current	Green	A
Voltage indicator	ON: current LED display is voltage	Green	V
Control mode indicator	ON, keypad control mode; OFF: terminal control mode; Flicker: communication control mode	Green	LOCAL
Potentiometer	Set frequency by the potentiometer	Green	None


Implication of the combination of indicators:

Indicator combination	Meaning
Hz、A	Set speed (r/min)
Hz、V	Set percentage (%)

4.2.3 Parameter Setting Method


The series inverter has 3 menu structures; function group is listed in menu level 1, parameter in menu level 2, and settings of parameters in menu level 3.

The setting of parameter is presented in decimal (DEC) and hexadecimal (HEX) format. If it is set in hexadecimal format, each digit of the setting is independent to one another.

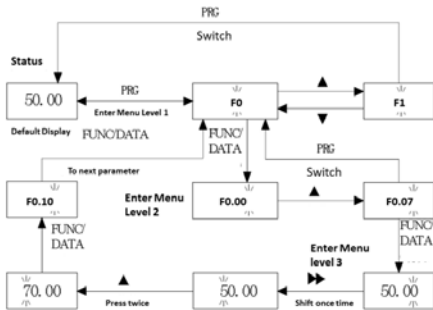

4.2.4 Motor parameters self learning

In order to achieve a good dynamic and static control performance, inverter needs to complete the motor parameters self learning, see the following proedures:

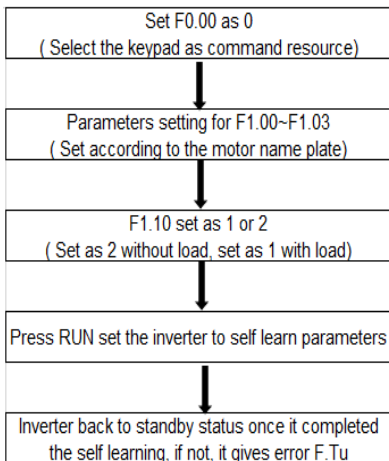

4.2.5 Password setting

When you need to set the password for the inverter, set FF.00 as a non-zero value, exit the editing status, leave the inverter for five mins without any operation and the password you just set becomes effective. Press the PRG button to enter the function codes setting, it displays 0.0.0.0, it requires the password now to enter next. If you want to cancel the password, just set FF.00 as 0.

5 Parameters

Note:

The contents in the“【】”are factory default.

5.1 Basic Parameters (P0)

P0.00 Command channel	Range: 0~2 【0】
-----------------------	----------------

B1000 has 3 kinds of command channels:

0: LED keypad display unit, use RUN and STOP key on the keypad to control the inverter.

1: Terminal control: Input operating commands via terminals. Use terminals FWD, REV, to start and stop the inverter

2: Serial communication port control.

P0.01 Reserved	Reserved
P0.02 Frequency source setting	Range: 0~6 【0】

0: Digital setting 1, set by ▲ or ▼ key.

Initial frequency is the value of P0.04 and it can be adjusted via ▲ and ▼ keys on the keypad.

1: Digital setting 2 set by terminal UP/DN.

Initial frequency is the value of P0.02 and it can be adjusted via terminal UP/DN.

2: Digital setting 3, set through serial communication port

Initial frequency is the value of P0.04 and it can be adjusted via serial communication port.

3: Reserved

4: The reference frequency is set by AI input (0~10V/0~20mA), the frequency calculation curve is given in P5.10~P5.21

5: Reserved

6: Keypad Potentiometer Setting

P0.03 Auxiliaryreference frequency	Range: 00~13 【0】
------------------------------------	------------------

Method	Name	Description
0	Invalid	Auxiliary freq.=0
1	Adjust by ▲ and ▼	Default is P0.05
2	Adjust by UP/DN	
3	Set by serial port	
4	Reserved	Depending on actual input.
5	AI	
6	Reserved	
7	Reserved	
8	-AI	
9	Reserved	
10	Reserved	
11	AI-5V	
12	Reserved	
13	Potentiometer	

P0.04 Keypad digital setting	Range: Lower limit of freq.~Upper limit of freq. 【50.00Hz】
------------------------------	---

When the frequency source setting method is defined as keypad digital setting(P0.02=0、1、2), P0.04 is the initial value of frequency.

P0.05 Digital auxiliary frequency	Range: 0.00~650.00Hz 【0.00Hz】
-----------------------------------	--------------------------------------

P0.05: The initial value of digital auxiliary frequency.

It is valid only when P0.03=1~3 and it is the initial value of auxiliary frequency in these three mode

P0.06 Base frequency	Range: 0.00~650.00Hz 【50.00Hz】
P0.07 Upper limit of	Range: Upper limit~Max output freq.

freq.	【 50.00Hz 】
P0.08 Lower limit of freq	Range: 0~Upper limit of freq. 【 0.00Hz 】
P0.09 Max output frequency	Range: Max {50.00, P0.12 upper limit of frequency} ~ 650.00H 【 50.00Hz 】
P0.10 Max output voltage	Range: 1~480V 【 Inverter's rated 】

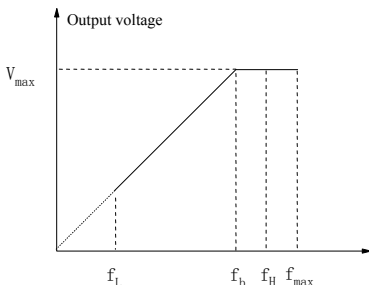


Figure 6-6 Characteristic parameters definition

The max frequency refers to the allowed max output frequency of the inverter. Refer to the f_{\max} in Figure 6-6;

Base frequency normally corresponds with the rated frequency of the motor. It is the Min frequency when the inverter outputs the highest voltage, as shown in Figure 6-6 as f_b

Max output voltage is the inverter's output voltage when the inverter outputs base frequency, as shown in Figure 6-6 as V_{\max} . This corresponds to the rated voltage of the inverter

The f_H and f_L are defined by P0.07 and P0.08 as upper limit and lower limit of frequency respectively.

P0.11 Running direction	Range: 0、1 【 0 】
-------------------------	------------------

The function is used to select motor direction of rotation when running in keypad control mode.

0: Forward

1: Reverse

In two wire terminal control mode, you can switch motor direction of rotation by change this parameter value.

P0.12	Acc time 1	Range: 0.1~3600s (min) 【6.0s】
P0.13	Dec time 1	Range: 0.1~3600s (min) 【6.0s】

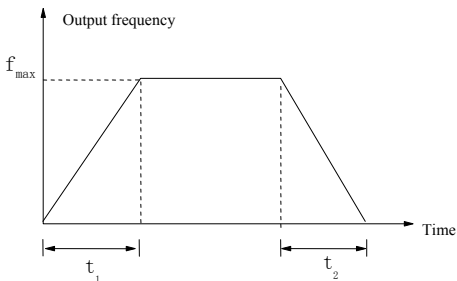


Figure 6-7 Acc/Dec time definition

Acc time is the time taken for the motor to accelerate from 0 Hz to the maximum frequency (as set in P0.09), see t_1 in Figure 6-7. Dec time is the time taken for the motor to decelerate from maximum frequency (P0.09) to 0 Hz, see t_2 in Figure 6-7.

P0.14	Reserved	Reserved
-------	----------	----------

5.2 Motor Parameter (P1)

P1.00	Reserved	Reserved
-------	----------	----------

P1.01	Motor's poles	Range: 2~14 【4】
P1.02	Rated power	Range: 0.4~1000kW 【depending on model】
P1.03	Rated current	Range: 0.1~999.9A 【depending on model】

P1.01~P1.03 is to set motor's parameters. Be sure to input the values according to motor's nameplate.

P1.04	Current without load	Range: 0.1~6553A 【depending on model】
P1.05	Stator resistance	Range: 0.0~50.00% 【depending on model】
P1.06	Leakage inductance	Range: 0.0~50.00% 【depending on model】
P1.07	Rotor resistance	Range: 0.0~50.00% 【depending on model】
P1.08	Mutual inductance	Range: 0.0~2000.0% 【depending on model】

After the success of the motor parameter self learning, P1.04 ~ P1.08 parameters will be automatically updated.

After change P1.02 motor rated power, P1.04 ~ P1.08 parameter value will be back to the factory.

P1.09	Rated slip frequency	Range: 0.00~20.00Hz 【0Hz】
-------	----------------------	----------------------------------

The motor rated speed can be obtained by the motor nameplate.

P1.10	Auto tuning	Range: 0~2 【0】
-------	-------------	-----------------------

0: Auto-tuning is disabled

1: Stationary auto-tuning (Start auto-tuning to a standstill motor

Before starting auto-tuning, values on the motor's nameplate must be input correctly (P1.01~P1.03). When starting auto-tuning to a standstill motor, the stator's resistance, rotor's resistance and the leakage inductance will be measured and the measured values will be written into P1.05, P1.06 and P1.07 automatically.

2: Rotating auto-tuning

When starting a rotating auto-tuning, at first, the motor is in standstill status, and the stator's resistance, rotor's resistance and the leakage inductance will be measured, and then the motor begins to rotate, mutual inductance, parameters will be measured and written into P1.05, P1.06, P1.07, P1.08 and P1.04 automatically.

After auto-tuning, P1.10 will be set to 0 automatically.

Auto-tuning procedures:

- 1) Set the "P0.06 basic operating frequency" and "P0.07 Max output voltage" correctly according to the motor's feature;
 - 2) Set the P1.01, P1.02 and P1.03 correctly;
 - 3) If P1.10 is set to 2, Acc time (P0.12) and Dec time (P0.13) should be set correctly and remove the load from the motor and check the safety;
 - 4) Set P1.10 to 1 or 2, press **FUNC/DATA**, and then press **RUN** to start auto-tuning;
 - 5) When the operating LED turns off, that means the auto-tuning is over.
-

Note:

1. When setting P1.10 to 2, you may increase Acc/Dec time if over-current or over-voltage fault occurs in the auto-tuning process;
 2. When setting P1.10 to 2, the motor's load must be removed before starting rotating auto-tuning;
 3. The motor must be in standstill status before starting the auto-tuning, otherwise the auto-tuning cannot be executed normally;
 4. If it is inconvenient to start auto-tuning (e.g. the motor cannot break away from the load), or you don't require much on motor's control performance, you can use stationary auto-tuning or even disable the function. You may input the values on the motor's nameplate correctly (P1.01~P1.03);
 5. If the auto-tuning function is unavailable and there is motor's parameters on the nameplate, you should input the values correctly (P1.01~P1.03), and then input the calculated values (P1.04~P1.08). Please set the parameters correctly;
 6. If auto-tuning is not successful, the inverter alarms and displays fault F.tU.
-

5.3 Start/Brake Parameter (P2)

P2.00	Reserved	Reserved
P2.01	Start frequency	Range: 0.20~60.00Hz 【0.50Hz】
P2.02	Start frequency hold time	Range: 0.0~10.0s 【0.0s】

Start frequency refers the frequency at which the inverter starts, as shown in Figure 6-9 as f_s . Start frequency hold time refers the time within which the inverter runs at start frequency during start up, as shown in Figure 6-9 t_1 .

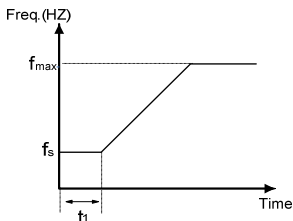


Figure 6-9 Relation of Start Freq. and Start Time

Note:

The start frequency is not limited by lower limit of the frequency.

P2.03~P2.07	Reserved	Reserved
P2.08	Stop mode	Range: 0、1、2 【0】

0: Decelerate to stop

When the inverter receives Stop command, it will reduce output frequency to zero and stop within preset deceleration time.

1: Coast to stop

When the inverter receives Stop command, it will stop outputting frequency and stop gradually relying on load inertia.

2: Deceleration + DC braking

When the inverter receives Stop command, it will reduce output frequency within preset Dec time. When it arrives at the frequency threshold of DC braking, the DC braking begins. Please refer to P2.09~P2.12.

P2.09 Frequency threshold of DC braking	Range: 0.00~60.00Hz 【1.00Hz】
P2.10 DC brake delay time	Range: 0.00~10.00s 【0.00s】
P2.11 DC brake current at stop	0.0~150.0% 【120.0%】
P2.12 DC brake time at stop	0.1~60.0s 【0.5s】

DC brake starting frequency: in stop process, when the frequency is reached, began to DC brake.

DC brake delay time: before the start of the DC brake, inverter blockade pulse, after the delay time, began to dc brake, used to prevent current overshoot of high-power motor brake starting time.

DC braking current: DC braking current relative to the percentage of the frequency converter rated current.

P2.13 Dynamic braking	Range: 0, 1 【0】
-----------------------	------------------------

0: Disabled

1: Enabled

Note:

For the occasion of big moment of inertia and a quick stop demand, this feature can be 1, and connect the matching braking resistor, achieve rapid downtime.

P2.14 Reserved	Reserved
----------------	----------

5.4 Flux vector control parameters (P3)

P3.00	Reserved	Reserved
P3.01	V/F freq. F3	Range: P3.03~P0.06 【0.00Hz】
P3.02	V/F voltage V3	Range: P3.04~100.0% 【0.0%】
P3.03	V/F freq. F2	Range: P3.05~P3.01 【0.00Hz】
P3.04	V/F voltage V2	Range: P3.06~P3.02 【0.0%】
P3.05	V/F freq. F1	Range: 0~P3.03 【0.00Hz】
P3.06	V/F voltage V1	Range: 0~P3.04 【0.0%】


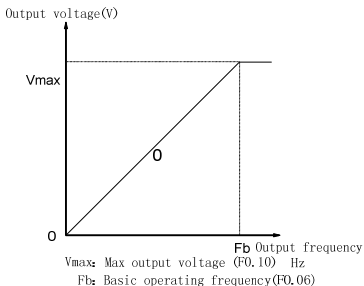


Figure 6-10 V/F curve

You can define a curve by P3.01~P3.06, i.e. a polygonal line defined by 3 points V1, V2, V3 is Relative to the percentage of the maximum output voltage

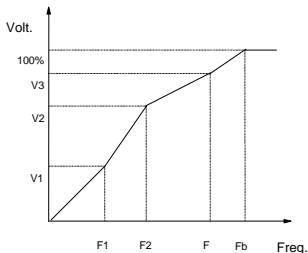

V1~V3: segment 1-3,voltage percentage

F1~F3: frequency segment 1-3

Fb: base frequency F0.06

Figure 6-15 User Defined V/F curve

When VFD worked in low frequency, setting torque boost value reasonably to counteract the output voltage reduction, in order to achieve sufficient output torque.

P3.07 Torque boost	Range: 0~30.0% 【2.0%】
P3.08 Manual torque boost cutoff point	Range: 0~50% 【10.0%】

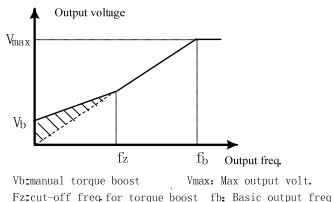


Figure 6-16 Torque boost (shadow area: boost value)

P3.07 Torque boost:

0: AutoTorque boost;

Non-0: Manual Torque boost

P3.08: Manual torque boost cut-off point

Cut-off frequency of relative frequency P0.06 percentage

P3.09~P3.10 Reserved	Reserved
P3.11 Compensation time	Range: 0.1~25.0s 【0.1s】

Compensation time constant:

To compensate filtering constant of frequency, more less this value more faster the refreshing is.

P3.12 AVR function	Range: 0、1、2 【0】
--------------------	-------------------------

0: Disabled

1: Always enabled

2: Disabled during decelerating

AVR: auto voltage adjustment. This function can keep constant output voltage when the input voltage deviates from rated value. Therefore, the function should be enabled all the time especially when the input voltage is higher than the rated value.

If AVR is disabled during deceleration, the Dec time is shorter but the current is higher, otherwise, the motor decelerates smoothly with lower current, but the Dec time is longer.

P3.13 Reserved	Reserved
P3.14 Motor stabilization factor	Range: 0~255 【Depending on model】

P3.14 is used to suppress the oscillation caused by the inverter and the motor. If the inverter's output current changes constantly at fixed load, the oscillation can be reduced by adjusting P3.14.

5.5 Current vector control parameter (P4)

P4.00~P4.10 Reserved	Reserved
----------------------	----------

5.6 Multi-function terminal (P5)

P5.00	Function of multi-function terminal X1	Range: 0~43 【1】
P5.01	Function of multi-function terminal X2	Range: 0~43 【2】
P5.02	Function of multi-function terminal X3	Range: 0~43 【0】
P5.03	Function of multi-function terminal X4	Range: 0~43 【0】
P5.04	Function of multi-function terminal X5	Range: 0~45 【0】
P5.05~P5.07	Reserved	Reserved

The multi-function terminals can realize various functions. You may assign functions to them by setting parameters P5.00~P5.04. Please refer to Table 6-3. Take X1~X3 for example in the following description.

Setting	Functions	Setting	Functions
0	No function	1	Foreward run
2	Reverse run	3	MS frequency 1
4	MS frequency 2	5	MS frequency 3
6	External fault normally-open input	7	External fault normally-closed input
8	Reset signal	9	Forward jog
10	Reverse jog	11	Coast-to-stop input
12	Frequency increase(UP)	13	Frequency decrease(DN)
14	PLC operation pause	15	Acc/Dec prohibit
16	3-wire operation control	17	External interrupt signal normally-open input
18	External interrupt signal normally-close input	19	DC injection braking command

Setting	Functions	Setting	Functions
20	Disable close-loop	21	Disable PLC
22	Frequency setting method 1	23	Frequency setting method 2
24	Frequency setting method 3	25	Reserved
26	MS frequency 4	27	Terminal control mode is forcibly enabled
28	Control mode 1	29	Control mode 2
30	Reserved	31	Reserved
32	Reserved	35	External stop command
36	Reserved	37	Inverter operation prohibiting
38	Reserved	40	Clear auxiliary reference frequency
41	Reset PLC stop status	42	Clear counter's record
43	Signal of triggering counter	44	Reserved
45	Reserved		

The functions are explained as follows:

1: Forward

2: Reverse

3~5: MS terminals (26 is MS frequency 4)

If any three of P5.03~P5.05 are set at 3~5 or 26 respectively, Up to 16 segments of speed can be defined through the combination of the ON and OFF state of the 4 terminals.

6~7: External fault signal (normally-open/close input)

If the setting is 6~7, fault signal of external equipment can be input via the terminal, which is convenient for the inverter to monitor the fault of

external equipment. Once the inverter receives the fault signal, it will display “F.ED”. The fault signal has two input modes, i.e. normally-open and normally-close.

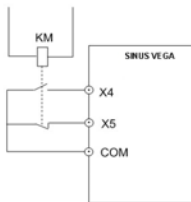


Figure 6-20 Normally-open/close input

In Figure 6-20, X4 is normally open input and X5 normally close input.

KM is external fault relay.

8: Reset

If any of P5.00~P5.04 is set at 8, the inverter can be reset via the terminal when the inverter has a fault. The function of this terminal is the same with the **RESET** key on the keypad.

9~10: External jog command (JOGF/JOGR)

If any of P5.00~P5.04 is set at 9~10, the terminal can enable the jog operation. JOGF is terminal for forward jog operation command and JOGR is terminal for reverse jog operation command. Jog frequency, jog interval and jog Acc/Dec time are defined in P9.05~P9.08.

11: Coast to stop

This function is the same with P2.08, however, it is realized by terminal and convenient for remote control.

12~13: Frequency increase (UP) /decrease (DN)

If the setting is 12~13, the terminal can be used to increase or decrease frequency instead of ▲ and ▼ keys on the panel for remote control. This

terminal is valid when P0.00=1 or P0.03=2. Increasing or decreasing rate is determined by P5.09.

14: Pause command for simple PLC:

If the setting is 14, the terminal is used to pause the PLC operation and the inverter operates at zero frequency when the terminal is enabled, but the running time is not counted. If the terminal is disabled, the inverter will start at start frequency and continue the PLC operation. Refer to PD.00~PD.08 for the use of this terminal.

15: Acc/Dec prohibit

The motor is immune to any external command except Stop command and maintain the present speed.

Note:

This function is disabled during normal decelerating to stop.

16: 3-wire operation control

Refer to P5.08.

17~18: External interrupt signal normally-open input

When the inverter receives an interrupt signal during running, it will stop outputs and run at zero frequency. Once the signal removed, the inverter will resume previous running at start frequency.

As Figure 6-20 shows, there are X4, normally open contacts and X5, normally closed contact.

Note:

Different from function 6~7, the external interrupt signal will not cause alarm, and the inverter will resume previous running once the signal removed.

19: DC Braking (DB)

If the setting is 19, the terminal can be used to perform DC injection braking to the motor that is running for emergency stop and accurate location. Initial braking frequency, braking delay time and braking current are defined by P2.09~P2.11. Braking time is decided by the bigger value between P2.12 and the period that the terminal is effective.

20: Disable close-loop

If the setting is 20, the terminal can be used to realize the flexible switching between close-loop operation and low level operating mode.

When the inverter is switched to low level operating mode, its start/stop, operating direction, ACC/Dec time are shifted to the corresponding operating modes accordingly.

21: Disable PLC

If the setting is 21, the terminal is used to realize the flexible switching between PLC operation and low level operating mode.

When the inverter is switched to low level operating mode, its start/stop, operating direction, ACC/Dec time are shifted to the corresponding operating modes accordingly.

22~24: Reference frequency setting method

Through the combination of the ON/OFF state of X1, X2 and X3, you can select different frequency setting method, which will come into effect regardless of P0.02.

Table 6-5 Frequency Setting Mode Selection

X3	X2	X1	Mode
OFF	OFF	OFF	None
OFF	OFF	ON	Digital setting 1
OFF	ON	OFF	Digital setting 2
OFF	ON	ON	Digital setting 3
ON	OFF	OFF	VCI analog setting
ON	OFF	ON	CCI analog setting
ON	ON	OFF	Reserved
ON	ON	ON	LED keypad

25: Reserved

26: MS terminals

27: Terminal control mode is enabled

When this terminal function is enabled, the operating command is input through this terminal forcibly. The inverter will be controlled in the previous mode if FWD/REV terminal function is disabled.

28~29: Control mode selection X1~X2

Table 6-6 Control Mode Selection

X2	X1	Control mode
OFF	OFF	None
OFF	ON	LED keypad
ON	OFF	Terminal
ON	ON	Serial port

The selection of control mode is realized by the combination of ON/OFF state of any two of X1~X5. In the above table, you should set P5.00=28, P5.01=29.

30~34: Reserved

35: External Stop command

This Stop command is valid to all control modes. When this function is enabled, the inverter will stop as specified P2.08.

36: Reserved

37: Prohibit inverter from operating

If this function is enabled, the inverter that is operating will coast to stop and the inverter ready to run will be prohibited to start. This function is mainly used as safety protection.

38: Reserved

39: Reserved

40: Clear the setting of auxiliary reference frequency

This function is valid for auxiliary reference frequency (P0.03=1, 2 and 3) to clear it to zero, so that the reference frequency is determined solely by main reference.

41: Reset PLC state

When the inverter stops in PLC mode, the memorized PLC operating information (operating stage, operating time, operating frequency, etc.) will be cleared.

42: Clear the counter to zero

This function is to clear the counter to zero and is used in conjunction with function 43.

43: Input signal to trigger the counter

When the setting is 43, this terminal is used to input counting pulse signal to the internal counter of the inverter. The max.pulse frequency is 200Hz. The present counting value can be saved at power off. See P6.10 and P6.11 for details.

44: Reserved

45: Reserved

P5.08 Terminal control mode

Range: 0~3 **【0】**

This parameter defines four operating modes controlled by external terminals.

0: 2-wire operating mode 1

K2	K1	Command
0	0	Stop
0	1	REV
1	0	FWD
1	1	Stop

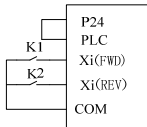


Figure 6-21 2-Wire Operation Mode 1

1: 2-wire operating mode 2

K2	K1	Command
0	0	Stop
1	0	Stop
0	1	FWD
1	1	REV

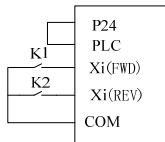


Figure 6-22 2-Wire Operation Mode 2

2: 3-wire operating mode 1

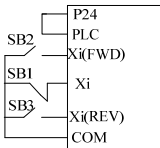


Figure 6-23 3-Wire Operation Mode 1

SB1: Stop button; SB2: Run forward button; SB3: Run reverse button

Terminal Xi is the multi-function input terminal of X1~X5. For this case, the corresponding parameter should be set at 16 (3-wire operation).

3: 3-wire operating mode 2

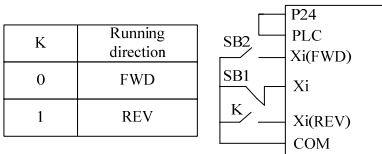


Figure 6-24 3-Wire Operation Mode 2

SB1: Stop button; SB2: Run button

Terminal Xi is the multi-function input terminal of X1~X5. For this case, the corresponding parameter should be set at 16 (3-wire operation).

P5.09~P5.11Reserved	Reserved
P5.12 Filter constant	Range: 0.01 ~ 50.00s 【0.50s】
P5.13 Reserved	Reserved
P5.14 Ratio of Min. input of curve 1	Range: 0.0% ~ P5.16 【2.0%】

P5.15 Frequency corresponds to min. input of curve 1	Range: 0.0~P0.09 【0.00Hz】
P5.16 Ratio of Max. input of curve1	Range: P5.14~100.0% 【100.0%】
P5.17 Frequency corresponds to max. input of curve 1	Range: 0.0~P0.09 【50.00Hz】
P5.18~P5.21Reserved	Reserved

5.7 Output terminal control parameters (P6)

P6.00 Open collector output terminal Y1	Range: 0~19 【0】
P6.01 Reserved	Reserved
P6.02 Relay 1 output function	Range: 0~19 【16】
P6.03 Reserved	Reserved

Refer to section 3.3.2 for the output characteristics of Y1 and the relay's output terminal. Table 6-8 shows the functions of the above 3 terminals. Note that one function can be selected repeatedly.

Table 6-8 Parameter Setting and Function of Output Terminals

Setting	Function	Setting	Function
0	Inverter running signal (RUN)	1	Frequency arrival signal (FAR)
2	Frequency detection threshold (FDT1)	3	Reserved
4	Reserved	5	Low voltage lock-up signal (LU)
6	External stop command (EXT)	7	Higher limit of frequency(FHL)
8	Lower limit of frequency (FLL)	9	Zero-speed running
10	Completion of simple PLC operation	11	PLC cycle completion indication
12	Preset counting value arrival	13	Specified counting value arrival
14	Inverter running state	15	Inverter is ready (RDY)
16	Inverter fails	17	Extended function 1 of host

Setting	Function	Setting	Function
18	Reserved	19	Preset operation time out

The explanation of output signal is shown in Table 6-8.

0: Inverter running signal (RUN)

This signal will be given if the inverter is running.

1: Frequency arrival signal (FAR)

See P6.13.

2: Frequency detection threshold (FDT1)

See P6.14~P6.15.

3: Reserved

4: Reserved

5: Low voltage lock-up signal (LU)

The signal will be given when the DC bus voltage is lower than the low voltage limit, and the LED displays “-LU-”.

6: External stopping command (EXT)

The terminal outputs the indicating signal if the inverter outputs tripping signal caused by external fault (F.Ed).

7: Higher limit of frequency (FHL)

The signal is given if the preset frequency is higher than upper limit of frequency and the operating frequency reaches the upper limit of frequency.

8: Lower limit of frequency (FLL)

The signal is given if the preset frequency is higher than lower limit of frequency and the operating frequency reaches the lower limit of frequency.

9: Zero-speed running

The signal is given if the inverter's output frequency is 0 and the inverter is in operating status.

10: Completion of simple PLC operation stages

The signal is given (pulse, 500ms) if the present stage of PLC operation is finished.

11: PLC cycle completion indication

The signal (pulse, 500ms width) is given if one cycle of PLC operation is finished.

12: preset counting value arrival

13: reference length arrival

Refer to P6.11~P6.12.

14: Inverter running state

When inverter is in a state of reverse, output is activated

15: Inverter is ready (RDY)

The RDY signal is output when the inverter has no fault, its DC bus voltage is normal; the Start Prohibit function is disabled. It is ready to start.

16: Inverter fails

The signal is given if the inverter has faults.

17: Extended function 1 of host

The output signal of terminal Y1 or TC is directly controlled by a serial port. Refer to the communication protocol of B1000.

19: preset operating time out

The signal is given if the inverter's total operating time (PN.01) reaches preset operating time (PN.00).

P6.04 AO output function	Range: 0~12 【0】
P6.05~P6.06 Reserved	Reserved

Setting	Function	Range
0	Output freq. before compensation	0~Max. output freq.
1	Output freq. after compensation	0~Max. output freq.
2	Preset freq.	0~Max. output freq.
3	Output current	0~2 times of inverter's rated current

Setting	Function	Range
4	Output current	0~2 times of motor's rated current
5	Output torque	0~2 times of motor's torque
6	Output voltage	0~1.2 times of inverter's rated voltage
7	Bus voltage	0~800V
8	Reserved	Reserved
9	AI	0~10V/0~20mA
10	Output power	0~2 times of rated power
11	Extended function 2 of host	0~65535
12	Setting of potentiometer	0~10V

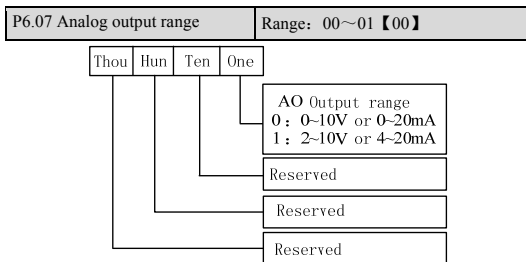


Figure 6-30 Analog Output Type Selection

The parameter is to select the output type, i.e. voltage or current, CN6 jumper is for AO, “I” represents current, “V” represents voltage.

P6.08 AO output gain	Range: 0.0~200.0% 【100.0%】
-----------------------------	-----------------------------------

P6.09~P6.10 Reserved	Reserved
P6.11 Preset counting value	Range: P6.12~65535 【0】
P6.12 Specified counting value	Range: 0~P6.11 【0】

Frequency inverter through the number 43 function “counter trigger signal input (X terminal)” to count.

Set count value: when the count value reach to set value, Y terminals output a indicator, counter stop counting;

Specified count value: when the count value reaches the specified count value, Y terminal output indicator, until set count reached;Among them, the current count value P9.35 can be modified.

P6.13 Freq. arrival detection range (FAR)	Range: 0.00~650.00Hz 【2.50Hz】
---	--------------------------------------

Set this function is used to test the current output frequency and frequency deviation, the output terminal function set to 1 (the signal frequency reaches FAR), when the output frequency of frequency converter and the difference between the set frequency in P6.13 (frequency) to check out the width range, the terminal output frequency to signal (FAR)

P6.14 FDT1 level	Range: 0.00~650.00Hz 【50.00Hz】
P6.15 FDT1 lag	Range: 0.00~650.00Hz 【1.00Hz】
P6.16~P6.17 Reserved	Reserved

P6.14~P6.15 is a complement to the No.2 function in Table6-8.

For example: when the inverter’s output frequency reaches FDT1level, it outputs an indicating signal until its output frequencydrops below FDT1 level (FDT1 level-FDT1 lag) .As shown inFigure 6-33.

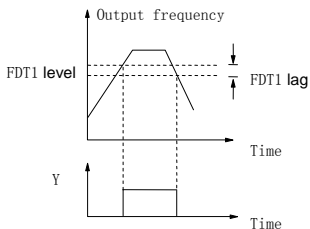


Figure 6-33 Frequency Detection

5.8 Close-loop PID control (P7)

P7.00 Close-loop PID control	Range: 0、1 【0】
------------------------------	-----------------------

0: Non Closeloop PID control

1: Closeloop PID control

P7.01 Reference input method	Range: 0~4 【0】
------------------------------	-----------------------

0: Digital setting

Take the value of P7.05

1: Reserved

2: Reserved

3: LED keypad potentiometer given

4: Reserved

P7.02 Reserved	Reserved
P7.03 Input filter	Range: 0.01~50.00s 【0.50s】
P7.04 Feedback filter	Range: 0.01~50.00s 【0.50s】

P7.05 Digital reference input	Range: 0.00~10.00V 【0.00】
P7.06~P7.07 Reserved	Reserved
P7.08 Min. input	Range: 0.0%~P7.10 【0.0%】
P7.09 Feedback of min. input	Range: 0.0~100.0% 【0.0%】
P7.10 Max. input	Range: P7.08~100.0% 【100.0%】
P7.11 Feedback of max. input	Range: 0.0~100.0% 【100.0%】

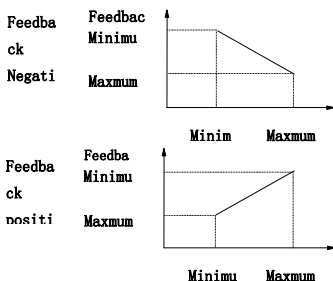


Figure 6-39 Relation of Input and Feedback

P7.12 Proportional gain Kp	Range: 0.000~9.999 【0.050】
P7.13 Integral gain Ki	Range: 0.000~9.999 【0.050】
P7.14 Sampling cycle Ts	Range: 0.01~50.00s 【0.50s】

The bigger the proportional gain, the faster the response, but oscillation may occur easily if proportional gain is too big.

If only proportional gain is used in regulation, the error cannot be eliminated completely. Therefore, it is preferred to use the integral gain

to form a PI control system. The bigger the integral gain, the faster the response, but oscillation may occur if integral gain is too big.

P7.14 refers to the sampling cycle of feedback value. The PI regulator calculates once in each sampling cycle. The bigger the sampling cycle the slower the response will.

P7.15 Error limit	Range: 0.0~20% 【2.0%】
-------------------	-----------------------

P7.15 is the max. error between system output and the close-loop reference, as shown in Figure 6-40. PI regulator stops operation when the feedback error is within this range. Setting this parameter correctly is helpful to improve the system output accuracy and stability.

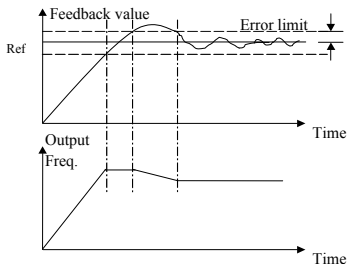


Figure 6-40 Error Limit Schematic Diagram

P7.16 Close-loop regulation characteristics	Range: 0、1 【0】
---	----------------

0: Positive logic

Set P7.16 to 0 if the motor speed is required to increase with the reference.

1: Negative logic

Set P7.16 to 1 if the motor speed is required to decrease with the increase of the reference.

P7.17~P7.28 Reserved	Reserved
----------------------	----------

P7.29 PID feedback break line detection	Range: 0.0~80.0% 【0.00%】
P7.30 PID feedback break line detection time	Range: 0.0~999.9s 【0.00s】

If set P7.29 to 0.0%, no feedback break line detection

Feedback break line detection threshold is a percentage of the full feedback.

If PID feedback signal is less than P7.29 and last more than setting time of P7.30, feedback break line alarm will appears.

Note:

Please set P7.29 reasonably, if not, will cause unnecessary downtime.

P7.31~P7.33 Reserved	Reserved
----------------------	----------

5.9 MS parameters (P8)

P8.00 MS freq. 1	Range: lower limit~upper limit 【 5.00Hz】
P8.01 MS freq. 2	Range: lower limit~upper limit 【10.00Hz】
P8.02 MS freq. 3	Range: lower limit~upper limit 【20.00Hz】
P8.03 MS freq. 4	Range: lower limit~upper limit 【30.00Hz】
P8.04 MS freq. 5	Range: lower limit~upper limit 【40.00Hz】
P8.05 MS freq. 6	Range: lower limit~upper limit 【45.00Hz】
P8.06 MS freq. 7	Range: lower limit~upper limit 【50.00Hz】
P8.07~P8.14 MS freq. 8~ 15	Range: lower limit~upper limit 【50.00Hz】
P8.15~P8.20 Reserved	Reserved

5.10 Enhanced function (P9)

P9.00~P9.01 Reserved	Reserved
P9.02 Carrier wave frequency	Range: 0.7~15.0kHz 【6.0kHz】

Table 6-11 Carrier Freq. and Performance

Carrier wave Freq.	Decreasing	Increaseing
Motor noise	↑	↓
Motor temperature rise	↑	↓
Inverter temperature rise	↓	↑
Leakage current	↓	↑
Interference to external	↓	↑
Output current wave	Worse	Better

P9.03 CWF auto adjustment	Range: 0、1 【0】
---------------------------	-----------------------

0: Disabled

1: Enabled

When CWF auto adjustment is enabled, the inverter can adjust CWF automatically according to the temperature inside the inverter.

P9.04 Reserved	Reserved
P9.05 Jog frequency	Range: 0.10~P0.07Hz 【5.00Hz】
P9.06 Reserved	Reserved
P9.07 Jog Acc time	Range: 0.1~60.0s 【6.0s】
P9.08 Jog Dec time	Range: 0.1~60.0s 【6.0s】

JogFrequency: frequency in Jog mode

Jog acceleration/deceleration time: Acc/Dec time in Jog mode

P9.09~ P9.14 Reserved	Reserved
P9.15 Positive or negative logic of terminal	Range: 000~FFFH 【000H】

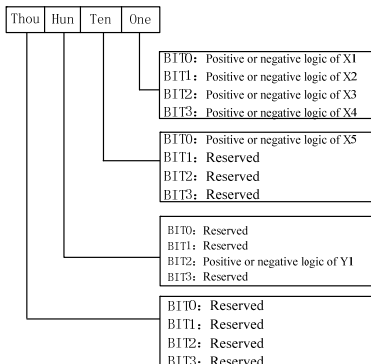


Figure 6-46 Positive or Negative logic of Terminals

BIT Settings:

0: Valid when X and common connected, disconnect is invalid;

1: Invalid when X and common connected, disconnect is valid;

P9.16~P9.17 Reserved	Reserved
P9.18 Digital auxiliary reference control	Range: 000~111 【000】

P9.18 is only valid when P0.01=1~3

1: Storage control

0: Storage auxiliary frequency when power supply drop off

The auxiliary frequency will be stored in P0.05, auxiliary frequency will superposition polarity stored in P9.18 polarity.

1: don't store auxiliary frequency when power supply drop

Ten: stop frequency processing

0: keep the auxiliary frequency after downtime

1: setting frequency reset after downtime

Hundred: auxiliary frequency superposition of polarity

0: Positive polarity

Sum of main frequency and of auxiliary frequency is defined as set frequency

1: Negative polarity

D-value of main frequency and of auxiliary frequency is defined as set frequency

P9.19~P9.21 Reserved	Reserved
P9.22 Cooling fan	Range: 0、1 【0】

0: Auto-stop mode

The cooling fan keeps running during operation. After the inverter stops for 3minutes, the cooling fan will continue to run or stop according to the module temperature.

1: Cooling fan keeps running upon power on.

P9.23~P9.29 Reserved	Reserved
P9.30 Conditions of restart after power failure	Range: 0、1 【0】

P9.30=0, not auto restart.

In fact, whether to auto restart depends on P9.30, inverter's state at power failure and control mode. Refer to Table 6-14.

Table 6-14 Conditions of Restart after Power-on

P9.30	State before power off	Control mode at power-on				
		Keypad	Serial port	3-wire terminal 1、2	2-wire terminal 1、2	
		None	None	None	None	Yes
0	Stop	0	0	0	0	0

P9.30	State before power off	Control mode at power-on				
		Keypad	Serial port	3-wire terminal 1、2	2-wire terminal 1、2	
		None	None	None	None	Yes
	Run	0	0	0	0	0
1	Stop	0	0	0	0	1
	Run	1	1	1	0	1

Note:

1. Table 6-14 shows the inverter's action under different conditions. "0" means the inverter is ready to start, and "1" means auto start.
2. When the control mode is keypad or serial port or 3-wire terminal 1 and 2, there is no RUN command at power on.
3. If there is a Stop command, the inverter will not start.

P9.31~P9.33 Reserved	Reserved
P9.34 Terminal filter time	Range: 0.5~100.0ms 【7.5ms】
P9.35 Current count value	Range: 0~65535 【0】

Terminal filter time: can increase P9.34 properly, improve the anti-interference ability of the X input terminals. Terminal filter, the longer terminal action delay time is longer.

The current count value: built-in counter for input pulse count, the value can be modified on-line, this value can be saved when power off.

P9.36 Under-voltage point set	Range: 75.0%~135.0% 【90%】
P9.37~P9.42 Reserved	Reserved
P9.43 PWM Model optimization	Range: 0000~0211H 【0011】

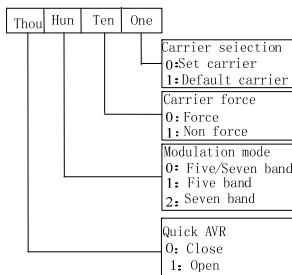


Figure 6-47 PWM model optimization mode selection

P9.44~P9.50 Reserved	Reserved
----------------------	----------

5.11 Display Control Parameters (PA)

PA.00 LED displayed parameter selection 1	Range: 000~3FFH 【00DH】
---	------------------------

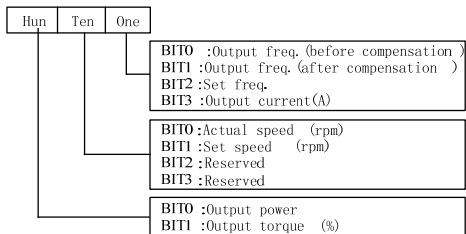


Figure 6-59 LED Displayed Parameter 1 Setting

PA.00 and PA.01 define the parameters that can be displayed by LED when the inverter is operating.

If Bit is set at 0, the parameter will not be displayed;

If Bit is set at 1, the parameter will be displayed.

As to the conversion of binary format to Hex format, please refer to Table 6-12. You may press key to scroll through the parameters.

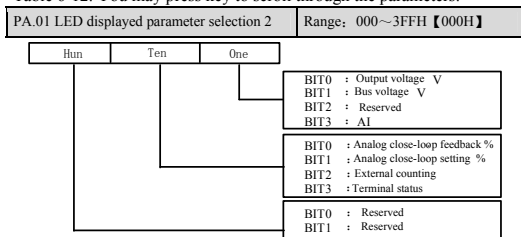


Figure 6-60 LED Displayed Parameter 2 Setting

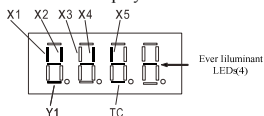


Figure 6-61 Terminal Status Indication

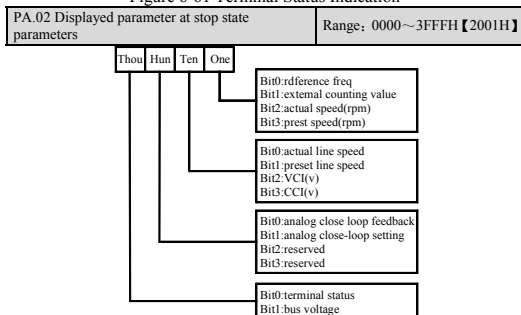


Figure 6-62 Parameter Displayed at Stop State

PA.03~PA.06 Reserved

Reserved

5.12 Communication (PB)

PB.00 Communication configuration

Range: 000~125H 【004】

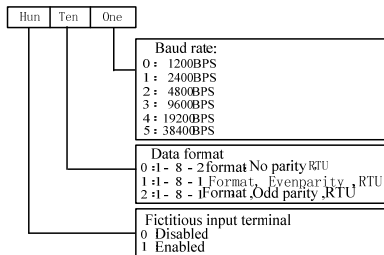


Figure 6-63 Communication Configuration

This function code according to LED mode, used for serial communication preferences. Note: Controller with frequency conversion to set the baud rate and data format must agree, otherwise, the communication can't be.

Virtual terminal is refers to the controller sends commands are adopted to simulate the actual terminal, with each representing a data terminal, each value represents the corresponding terminal state: bit0 ~ bit12: virtual terminal X1 and X5, NC, NC, NC, NC, Y1, NC, TC, NC. PC virtual terminal is valid, the actual terminal function is invalid, virtual terminal equivalent terminal application.

PB.01 Local address

Range: 0~247 【1】

In serial communication, PB.01 is unique, used to identify the inverter's address.

Note: "0" is the broadcast address. When the address is set to broadcast address, the inverter can receive and execute the command sent by control FC, but will not answer it.

PB.02 Communicate timeout detect

Range: 0~1000.0s 【0.0s】

When the communication signal is lost for a period longer than the setting of this parameter, the inverter deems that communication fault occurs.

When it is set at 0, the inverter will not detect the signals at the serial port, i.e., this function is invalid.

PB.03 Response delay	Range: 0~1000ms 【5ms】
----------------------	-----------------------

Response delay refers to the time from the inverter receiving and executing the command of the host to returning reply frame to the host. For RTU mode, the actual response delay should be no less than 3.5 bytes' transmitting time.

PB.04 Master-slave selection	Range: 0~1 【0】
------------------------------	----------------

0: Slave

1: Master

Note: If master, usually used in multi-inverter interaction applications.

PB.05 Ratio of slave inverter setting frequency	Range: 0~10.00 【1.00】
---	-----------------------

This parameter applies only to the slave, used for setting from the receiving master given correction coefficient.


Slave given= PB.05 *(Master given)

5.13 Professional parameters (PC)

PC.00~ PC.14 Reserved	Reserved
-----------------------	----------

5.14 PLC parameters (PD)

Simple PLC is a multi-speed generator, through which, the inverter can change frequency and direction according to the running time. This function is realized through PLC (programmable logic controller) before, now the inverter can do it by itself. See Figure 6-67.

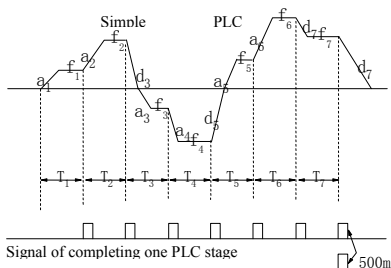

Signal of completing one PLC cycle

Figure 6-67 Simple PLC Operation

In Figure 6-67, a1~a7, d1~d7 are the Acc and Dec time of the respective stage; f1~f7 and T1~T7 will be defined in later parameters.

The PLC stage and PLC cycle are indicated by the 500mS signals from output terminals Y1 and Y2 of open collector output or relay output. See P6.00~P6.02.

PD.00 Simple PLC mode	Range: 0000~1123 【0000】
-----------------------	-------------------------

Thous	Hund	Ten	One
PLC running mode selection 0: disabled 1: stop after single cycle 2: retain value after 1 cycle 3: continuous			
PLC running after interrupt 0: start from first stage 1: start from the stage frequency where the drive stop 2: start from the frequency when it stops			
Save PLC status after poweroff 0: not save 1: save the stage and frequency at poweroff			
time unit 0: second 1: minute			

Figure 6-68 Stop after a Single PLC Cycle

One's place of PD.00, PLC running mode selection

0: Disabled

The PLC function is disabled.

1: stop after a single cycle

As Figure6-69 shows, the inverter stops after a single cycle automatically. It will start given another Run command.

2: Maintain value of the last stage after 1 cycle

As Figure 6-70 shows, the inverter holds the frequency and direction of the last stage after single cycle.

3: (Continuous cycle) : The inverter continues running cycle after cycle until Stop command is received.

Ten's place of PD.00: Restart mode after PLC interruption:

0: start from the first stage

The inverter restarts from the first stage of PLC after interrupts, such as Stop command, fault or poweroff.

1: continue from the stage frequency where the inverter stops. When the inverter stops caused by Stop command or fault, it can record the time that it has undergone in the current stage. After receiving Run command, it will run at the preset frequency of the stage for the remaining time of the stage

2: Start from the frequency where it stops:

When the inverter stops caused by Stop command or fault, it can record both the time it has undergone in the current stage and the very frequency when the inverter stops. It will pick up the recorded frequency and run for the remaining time of the stage.

Hundred's place of PD.00: Save PLC state after poweroff:

0: not save

The PLC state will not be saved when poweroff, and the inverter will start from the first stage after powerup.

1: save

The PLC state, including the stage, frequency, run time will be saved when poweroff and the inverter will start according to the setting of ten's place of PD.00 after powerup.

Thousand's place: Selection of time unit:

0: Second

1: Minute

This unit is only valid for defining the PLC operating time. The unit of Acc/Dec time in PLC operation is determined by P9.23.

PD.01	Stage 1 setting	Range: 000~323 【000】
PD.02	Stage 1 run time	Range: 0~6500s (min) 【20.0s】
PD.03	Stage 2 setting	Range: 000~323 【000】
PD.04	Stage 2 run time	Range: 0~6500s (min) 【20.0s】
PD.05	Stage 3 setting	Range: 000~323 【000】
PD.06	Stage 3 run time	Range: 0~6500s (min) 【20.0s】
PD.07	Stage 4 setting	Range: 000~323 【000】
PD.08	Stage 4 run time	Range: 0~6500s (min) 【20.0s】
PD.09~PD.30	Reserved	Reserved

PD.01、PD.03、PD.05、PD.07 are to set frequency, direction, Acc/Dec time of PLC stages. See Figure 6-74:

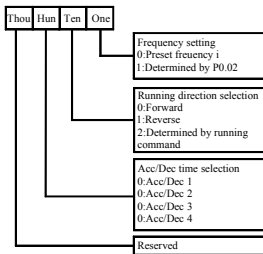


Figure 6-74 PLC Stage i setting (i=1~7)

One's place:

0: select MS frequency i, e.g. i=3, means the frequency for stage 3 is MS frequency 3, see P8.00~P8.06.

1: the frequency is determined by P0.02

5. 15 Constant-pressure water supply (PE)

PE.00~ PE.20 Reserved	Reserved
--------------------------	----------

5. 16 Protection (PL)

PL.00 Motor overload protection	Range: 0、1、2 【0】
------------------------------------	------------------

0: Disabled

The overload protection is disabled. Be careful to use this function because the inverter will not protect the motor in case of overload;

1: Common motor (with low speed compensation)

Since cooling conditions of common motor deteriorates at low speed, the motor's thermal protection threshold should also be adjusted. The "Low Speed" here refers to the operating frequency lower than 30Hz.

2: Variable frequency motor (without low speed compensation)

The cooling effect of variable frequency motor is not affected by the motor's speed, so low speed compensation is not necessary.

PL.01 Motor overload protection factor	Range: 20.0~110.0% 【100.0%】
--	-----------------------------

In order to apply effective overload protection to different kinds of motors, the Max output current of the inverter should be adjusted as shown in Figure 6-75.

The efficient is calculated by the formula below:

$$\text{Motor overload protection coefficient} = \frac{\text{motor rated current}}{\text{inverter's rated output current}} \times 100\%$$

Generally, the Max load current is the motor's rated current.

PL.02 Stall overvoltage	Range: 0、1 【1】
PL.03 Stall overvoltage point	Range: Depending on model

0: Disabled

1: Enabled

The setting of PL.03 is given in the table below:

Model	Range	Default
380V	120.0%~150.0%	140.0%
220V	110.0%~130.0%	120.0%

When the inverter is decelerating, the motor's decreasing rate may be lower than that of the inverter's output frequency due to the inertia of load. At this time, the motor will feed the energy back to the inverter, resulting in voltage rise on the inverter's DC bus, which will cause overvoltage trip.

Function of PL.03: during the deceleration, the inverter detects the bus voltage and compares it with the stall over voltage point defined by PL.03. If the bus voltage exceeds PL.03, the inverter will stop reducing its output frequency. When the detected bus voltage is lower than the point, the deceleration will continue. Please refer to in Figure 6-76.

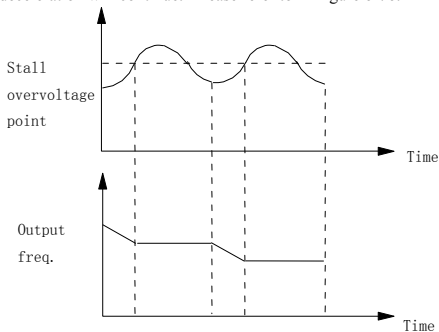


Figure 6-76 Stall Overvoltage

PL.04~ PL.06 Reserved	Reserved
PL.07 Auto current limiting threshold	Range: 20~200% 【160%】
PL.08 Reserved	Reserved
PL.09 Action mode of auto current limiting	Range: 0~5 【5】

Auto current limiting function is used to limit the load current under the preset current in real time to avoid trip due to over-current. This function is especially useful for the applications of larger load inertia or sharp change of load.

PL.07 defines the threshold for current limiting. Its setting is a percentage of inverter's rated current.

The action mode of auto current limiting function is decided by PL.09.

PL.09=0: When running in constant speed, auto current limit is invalid

PL.09=1: When running in constant speed, auto current limit is valid

PL.09=2: Auto current limit is valid all the time (mode 1)

PL.09=3: Reserved

PL.09=4: Reserved

PL.09=5: Auto current limit is valid all the time (mode 2)

Because the output frequency might change during current limiting, the function should be used for applications that require constant speed and stable frequency output.

PL.10~ PL.13 Reserved	Reserved
PL.14 Fault type of the first two times	Range: 0~29 【0】
PL.15 Fault type of the previous time	Range: 0~29 【0】
PL.16 Fault type of the last time	Range: 0~29 【0】
PL.17 Bus voltage at the last fault	Range: 0~999V 【0V】
PL.18 Output current at the last fault	Range: 0~6553A 【0.0A】
PL.19 Freq. at the last fault	Range: 0.00~650.00Hz 【0.00Hz】
PL.20 Heatsink 1 temperature at the last fault	Range: 0.0~120.0℃ 【0℃】
PL.21Reserved	Reserved

B1000 has 29 kinds of alarms. It can memorize the types of 3 latest faults (PL.14~PL.16) , and the voltage, current and frequency (PL.17~PL.19) of the most recent fault.

See chapter 8 for the detailed introductions to the alarm.

5.17 Operation Time and Temperature of Cooling Fan (PN)

If the accumulated operating time has amount to PN.00, the inverter will give out an indicating signal. Please refer to P6.00~P6.02.

PN.00	Preset operation time	Range: 0~65.535kh 【0】
PN.01	Total operation time	Range: 0~65.535kh 【0】
PN.02	Temperature of heatsink 1	Range: 0~120℃ 【0】
PN.03	Reversed	Reversed

PN.01 is the total accumulated operating time from delivery till now.

PN.02 refers to the temperature of inverter module.

Display range: 0~120℃; Accuracy: 5%

5.18 Protection of Parameters (PP)

PP.00	User password	Range: 0000~9999 【0000】
-------	---------------	-------------------------

User's password can prevent unauthorized persons from checking and modifying the parameters.

Set PP.00 to 0000 if the user's password is not necessary.

If you want to set the user's password, input a 4-digit number, press **FUNC/DATA** to confirm. If not pressing any key within 5 minutes, the password will become effective.

Changing the password:

Press **PRG**, input the old password, and then select PP.00 (at this time PP.00=0000), input new password and press **FUNC/DATA** to confirm. The password will become effective if not pressing any key within 5 minutes.

Note:

Please learn the password by heart.

PP.01	Write-in protection	Range: 0~2 【0】
-------	---------------------	----------------

PP.01 is to set the mode of write-in protection of parameters.

0: All parameters are allowed to be changed;;

1: No parameters can be changed except the P0.04 and PP.01;

2: No parameters can be changed except PP.01.

PP.02 Parameter initialization	Range: 0~2 【0】
--------------------------------	----------------

0: disabled

1: clear fault record

Clear the contents of PL.14~PL.19.

2: restore to factory defaults

If PP.02 is set at 2, the parameters listed before PL.14 except P1.00 and P1.09 will be restored to factory defaults.。

After the initialization, the parameter will change to 0 automatically.

PP.03~PP.06 Reserved	Reserved
----------------------	----------

5. 19 Factory Default (PU)

PU.00 User password	****
---------------------	------

6 Troubleshooting

All the possible faults of B1000 have been given in Table 7-1. Fault code range is F.oC1~F.tU. You can user can check the faults according to the following table and record detailed fault phenomena before seeking service. Please contact the sales distributor when you need technical supports.

Table 7-1 Fault Information and Diagnosis

Fault code	Display code	Fault description	Possible reasons	Actions
F.oC1	F.oC1	Over-current in Acc process	Too short Acc time	Prolong the Acc time
			V/F curve is not suitable	Check and adjust V/F curve, adjust torque boost or set the motor parameters correctly to ensure the normal auto torque boost works well.
			Low AC supply voltage	Check the inverter's input AC supply
			Moment of inertia of the load is too large, heavy impact load	Reduce the load of mutations, prolong the Acc time
			The rotating motor re-starts after the inverter stops instantly	Start when the motor absolutely stops
			Motor parameter setting is not normal	Properly set motor parameters
			Inverter power is too small	Select a higher power inverter
F.oC2	F.oC2	Over-current in Dec process	Too short Dec time	Prolong the Dec time
			Load inertia is too high	Connect suitable braking device
			Too low inverter's power	Select the inverter with larger capacity
F.oC3	F.oC3	Over-current in constant speed operation	Sudden change of load	Reduce the change of the load
			Too short Acc/Dec time	Prolong Acc/Dec time
			Abnormal load	Check the load

Fault code	Display code	Fault description	Possible reasons	Actions
			Low AC supply voltage	Check the AC supply voltage
			Too low inverter's power	Select the inverter with larger capacity
F.oU1	F.oU1	Over voltage in Acc process	Abnormal AC supply voltage	Check the AC supply voltage
			Too short Acc time	Prolong the Acc time
			The inverter is re-started with a rotating motor	Start when the motor stops
F.oU2	F.oU2	Over voltage in Dec process	Too short Dec time (with reference to generated energy)	Prolong the Dec time
			The load inertia is too high	Use suitable dynamic braking device
F.oU3	F.oU3	Over voltage inconstant-speed operating process	Abnormal AC supply voltage	Check the AC supply voltage
			Too short Acc/Dec time	Prolong the Acc/Dec time
			Abnormal change of input voltage	Install input reactor
			Too high load inertia	Use suitable dynamic braking device
F.PoU	F.PoU	Reserved	Reserved	Reserved
F.IPL	F.IPL	Reserved	Reserved	Reserved
F.oPL	F.oPL	Output phase loss	Output phase failure among Phase U, V and W	Check the inverter's output wiring Check the cable and the motor
F.FAL	F.FAL	Inverter module protection	Instant overcurrent	See User's manual
			Interphase shorted or groundshorted	Re-wiring
			Fan duct blockage or damage	Clear the fan duct or replace the fan
			Ambient temperature is too high	Lower the ambient temperature
			Panel wiring or plug-ins loose	Check and re-wiring
			Output phase loss or some other reasons result in current waveform abnormalities	Check the wiring

Fault code	Display code	Fault description	Possible reasons	Actions
			Charge voltage damaged, inverter voltage undervoltage	Seek service
			Straight bridge arm	Seek service
			Panel abnormal	Seek service
F.oH1	F.oH1	Inverter module heatsink overheat	Ambient over-temperature	Lower the ambient temperature
			Obstruction of ventilation channel	Clear the ventilation channel
			Fan does not work	Replace the fan
			Inverter fault	Seek service
F.oH2	F.oH2	Reserved	Reserved	Reserved
F.oL1	F.oL1	Inverter overload	Too short Acc time	Prolong Acc time
			Too large DC braking energy	Reduce DC braking current, prolong braking time
			Improper V/F curveV/F	Adjust V/F curve or torque boost value
			The inverter is re-started with a rotating motor	Start when the motor stops
			Low AC supply voltage	Check the AC supply voltage
			Too heavy load	Select the inverter with larger power
F.oL2	F.oL2	Motor Overload	Improper V/F curveV/F	Set V/F curve and torque boost value correctly
			Low AC supply voltage	Check the AC supply voltage
			Common moter operating at low speed, large load for long time	Select special motor for such operating condition
			Incorrect setting of motor overload protection factor	Correct the setting
			Motor blocked or load sudden change	Check the load
F.Ed	F.Ed	Emergency stop or external equipment fails	Press STOP key when operating at non-keypad mode	Check the present operating mode
			Press STOP when the inverter is in stall status	Set the operating parameters correctly

Fault code	Display code	Fault description	Possible reasons	Actions
			The inverter will report F.Ed fault if it is in stall status for 1 minute	Set the operating parameters correctly
			Terminal used for stopping the inverter in an emergency is closed	Disconnect the terminal if the external fault is cleared
F.EEP	F.EEP	EEPROM R/W fault	R/W fault of control parameters	Press STOP/RESET to reset
F.485	F.485	RS485 communication failure	Wrong baud rate setting	Set the baud rate correctly
			Serial port communication error	Press STOP/RESET to reset, Seek service
			Improper setting of alarm conditions	Modify PP.02、PP.03 and FPL.12
			Host FC does not work	Check whether the host FC is working or not; Check the wiring
F.Con	F.Con	Reserved	Reserved	Reserved
F.Ct	F.Ct	Current detection circuit is faulty	Wires or connectors of control board are loose	Check and re-wire
			Auxiliary power supply is damaged	Seek service
			Current detection circuit fault	Seek service
F.CPU	F.CPU	System disturbance	Severe disturbance from outside	Press STOP/RESET to reset or install power filter at the input side of the inverter.
			DSP control board read and write error	Press STOP/RESET to reset Seek service
F.rE1	F.rE1	Reserved	Reserved	Reserved
F.rE2	F.rE2	Reserved	Reserved	Reserved
F.CPy	F.CPy	Reserved	Reserved	Reserved

Fault code	Display code	Fault description	Possible reasons	Actions
F.tU	F.tU	Self-Tuning fault	Input motor parameters wrong	Re-input motor parameter according to the nameplate
			Tuning overtime	Check motor cables and limit it within 100m.
F.oH3	F.oH3	Reserved	Reserved	Reserved
F.LoF	F.LoF	PID feedback break line	Abnormal PID feedback signal	Modify P7.29
			Alarm parameters setting improperly	Check if PID wiring and feedback signal is normal
F.oLL	F.oLL	Reserved	Reserved	Reserved
F. ot	F.ot	Reserved	Reserved	Reserved
F.bE	F.bE	Reserved	Reserved	Reserved

Table 7-2 Operation Related Faults and Solutions

Phenomena	Conditions	Possible reasons of fault	Actions
No response of keys	Part of the keys or all the keys are disabled	Keypad locked	In stop or operating state, keep pressing FUNC/DATA key, when pressing ▼ key three times. Power off the inverter and then power on again
		Panel's cables are not well connected	Check the wiring
		Panel's keys are damaged	Replace operation panel or seek service
LED no display	No LED segment illuminates	Not power on.	Power on
		Keypad cable reverse connected	Immediately remove the keypad and connect it again correctly. If the problem persists, please connect our technical support person.
Parameter setting cannot be changed	Cannot be changed during operating	Parameter modification property is ×	Settings of parameters can be changed in stop status
	Settings of part of parameters cannot be changed.	Set PP.01 to 1 or 2	Set PP.01 to 0
		Parameter's modification property is *	The parameters cannot be changed by user
	No parameter but "0.0.0.0." is displayed when pressing PRG	User's password is required	Input correct user's password Seek service
Unexpected stops during running	The inverter stops automatically without STOP command. The RUN indicator goes out.	Alarm occurs	Find out the reason and reset.
		Single cycle of PLC finishes	Check PLC configuration
		Interruption of the communication between the inverter and host or flush mount faceplate	Check communication cables and PB.02, PB.03 settings
		Power failure	Check the power supply
		Command input method changed	Check the command input method and corresponding parameter
		Positive/negative logic of control terminal changed	Check P9.15.
	The inverter stops automatically	Auto reset of fault	Check reason of fault and the auto reset function

Phenomena	Conditions	Possible reasons of fault	Actions
	without STOP command. The RUN indicator is still on, zero-frequency running	Simple PLC pause	Check PLC pause function (terminal)
		Interrupt signal feedback from external devices	Check the configuration of external interrupt and faulty external devices
		Reference frequency is 0	Check the reference frequency
		Skip frequency	Check skip frequency
		Positive logic, close loop feedback>reference frequency, Negative logic, close loop feedback<reference frequency	Check the close loop setting and feedback
		Frequency adjustment is set at 0	Check P9.05
Inverter does not work	The inverter does not work after pressing "RUN" key, and the operating indicator is distinguished.	Restart low voltage compensation function enabled, and low supply voltage	Check the configuration of restart and the input voltage
		Terminal of coast to stop is valid	Check the terminal of coast to stop
		Terminal of prohibit running is valid	Check this terminal
		Terminal of external stop is valid	Check this terminal
		Fixed length stop	Check the setting of fixed length or clear the actual length
		The operation control terminal is not closed under 3-wire control mode	Reset and close this terminal
		Faulty alarm	Clear the fault
		Host virtual terminal set incorrectly	Cancel this function or reset P9.15
Display LU upon power on	Thyristor or contactor is disconnected and the inverter's load is too large	FWD/REV logic of input terminal is incorrectly	Check the set of P9.15
		As the thyristor or contactor is closed, the bus voltage will reduce when the inverter's load is large, so that "LU" is displayed instead of "F.Con"	Operate the inverter after the thyristor or contactor are completely closed

7 Maintenance

Many factors such as ambient temperature, humidity, dust, vibration, internal component aging, and wear and tear will give rise to the occurrence of potential faults. Therefore, it is necessary to conduct routine maintenance to the inverters.

Note:

As safety precautions, before carrying out check and maintenance of the inverter, please ensure that:

The inverter has been switched off;

The charging LED lamp in the inverter is off, which can be seen after removing the cover.

7.1 Routine Maintenance

The inverter must be operated in the environment specified in the Section 2.1. Besides, some unexpected accidents may occur during operation. The user should perform the routine maintenance to ensure a good operation environment according to the table below. A good way to prolong the lifetime of the inverter is to record the routine operation data, find out and clear faults in the early stage.

Table 8-1 Daily Checking Items

Object	Check		Criterion
	Items	Methods	
Environment	Temperature , humidity	Thermometer, hygrometer	-10°C ~+40°C. Derate if at 40°C ~50°C
	Dust, water and leakage	Observe	No sign of leakage
	Vibration	Vibration meter	Less than 5.9m/s ² (0.6g)
	Gas	Smell	No strange smell
Inverter	Heat	Touch the casing	Normal air flow
	Sound	Listen	No strange sound
	Output current	Clamp meter	Within rated range
	Output voltage	Voltage meter	Within rated range
Motor	Heat	Touch	No overheat
	Sound	Listen	No strange sound

7.2 Periodic Maintenance

You should check the inverter every 3 months or 6 months according to the actual environment.

Note:

1. Only trained personnel can dismantle the inverters for repairing or device replacement;
 2. Don't leave metal parts like screws or pads in the inverter, otherwise the equipment may be damaged.
-

7.3 General Inspection:

1. Whether screws of control terminals are loose. If so, tighten them with a screwdriver;
2. Whether the main circuit terminals are properly connected; whether the main cables are overheated;
3. Whether the power cables and control cables are damaged, check especially for any wear on the cable insulation;
4. Whether the insulating tapes around the cable lugs are stripped;
5. Clean the dust on FCBs and air ducts with a vacuum cleaner;
6. For inverters that have been stored for a long time, it must be powered on every 2 years. When supplying AC power to the inverter, use a voltage regulator to raise the input voltage to rated input voltage gradually. The inverter should be powered for 5 hours without driving a motor load.
7. Before performing insulation tests, all main circuit input/output terminals should be short-circuited with conductors. Then precede insulation test to the ground. Insulation test of single main circuit terminal to ground is prohibited; the inverter can be damaged by such a test. Please use a 500V Mega-Ohm-Meter.
8. If performing insulation test to the motor, be sure to disconnect the cables between the inverter and it. Otherwise, the inverter might be damaged.

Note:

Dielectric test of the inverter has already been done in the factory. It is not necessary for the user to do dielectric test again in order to avoid potential damage of its internal components.

7.4 Replacing Easily-worn Parts

The easily-worn parts of the inverter are cooling fan and electrolytic capacitor, whose life has close relation with the environment and maintenance. Refer to the table below.

Part	Life
Fan	30~40 thousand hours
Electrolytic capacitor	40~50 thousand hours
Relay TA/TB/TC	About 100,000 times

You can decide the time when the components should be replaced according to their service time.

1. Cooling fan

Possible cause of damages: wear of the bearing, aging of the fan vanes.

Criteria: After the inverter is switched off, check if an abnormal condition such as crack exists on fan vanes and other parts. When the inverter is switched on, check if inverter running is normal, and check if there is any abnormal vibration.

2. Electrolytic capacitors

Possible cause of damages: high ambient temperature, aging of electrolyte and large pulse current induced by rapid changing loads.

Criteria: Check if frequent over-current or over-voltage failures occur during inverter start-up with load. Check if there is any leakage of liquids (electrolytes) . Check if the safety valve protrudes. Measure static capacitance and insulation resistance.

3. Relay TA/TB/TC

Possible cause of damages: erosion, frequent operation.。

Criteria: ON/OFF malfunction.

7.5 Storing Inverters

The following points must be followed for the temporary and long-term storage of inverter:

1. Store in locations free of high temperature, humidity, dust, metal powder, and with good ventilation.
2. Long-term storage will cause the deterioration of electrolytic capacitors. Therefore, the inverter must be switched on for a test within 2 years, for at least 5 hours. The input 2 voltage must be applied gradually with a voltage regulator to the rated value.

7.6 Warranty

SANTERNO will offer warranty service in the case of the following situations:

1. The warranty clause is confined only to the inverter;
2. SANTERNO will take the responsibility of 36 months defects liability period for any faults or damages under the normal operation conditions as of manufacture date. After 36 months, maintenance will be charged;
3. Even within 36 months, maintenance would be charged under the following conditions:
 - ①.Damages incurred to the inverter due to mis-operations which are not in compliance with "User Manual";
 - ②.Damages incurred to the inverter due to fire, flood, and abnormal voltage and so on;
 - ③.Damages incurred to the inverter due to the improper use of inverter functions;
 - ④.Service fee will be charged according to the actual costs. If there are any maintenance contracts, the contract prevails.

8 Parameter profiles

“○”: Indicate the set value of the parameter can be changed when the inverter is in stop status or running status.

“×”: Indicate the set value of the parameter cannot be changed when the inverter is in running status.

“*”: It represents the value of this parameter is the actually measured value and cannot be changed.

“-”: It indicates that the parameter is "Factory default parameter" set only by the manufacturer and forbidden for users to change.

“Address” is the address of MODBUS protocol register

F0 Group: Basic Function Parameters (total 15 items)						
Code	Name	Setting Scope	Min Unit	Defaulted Value	Address	Change
P0.00	Command channel	0:Keypad command channel 1:Terminal control 2:Serial communication port control	1	0	000H	○
P0.01	Reserved	-	-	-	001H	*
P0.02	Frequency source setting	0: Digital setting 1 (Up/Down key) 1: Digital setting 2 (Terminal UP/DN) 2: Digital setting3 Serial communication port 3: Reserved 4: AI setting 5: Reserved 6: Keypad potentionmeter setting	1	0	002H	○

F0 Group: Basic Function Parameters (total 15 items)						
Code	Name	Setting Scope	Min Unit	Defaulted Value	Address	Change
P0.03	Auxiliary reference frequency	0: Invalid 1: Digital setting, up/down key (Initial value P0.05) 2: Digital setting, terminal UP/DN (Initial value P0.05) 3: Serial port setting (Initial value P0.05) 4: Reserved 5: AI 6: Reserved 7: Reserved 8: -AI 9: Reserved 10: Reserved 11: AI-5v 12: Reserved 13: Panel potentiometer setting	1	0	003H	○
P0.04	Keypad digital setting	Low limit frequency ~ upper limit frequency	0.01Hz	50.00Hz	004H	○
P0.05	Digital auxiliary frequency	0.0~650.00Hz	0.01Hz	0.00Hz	005H	○
P0.06	Base frequency	0.0~650.00Hz	0.01Hz	50.00Hz	006H	×
P0.07	Upper limit of freq.	Low limit frequency ~ Max output frequency	0.01Hz	50.00Hz	007H	×
P0.08	Lower limit of freq.	0.00Hz ~ upper limit frequency	0.01Hz	0.00Hz	008H	×
P0.09	Max output frequency	upper limit frequency ~ 650.00Hz	0.01Hz	50.00Hz	009H	×

F0 Group: Basic Function Parameters (total 15 items)						
Code	Name	Setting Scope	Min Unit	Defaulted Value	Address	Change
P0.10	Max output voltage	1~480V	1V	Rated	00AH	×
P0.11	Running direction	0: Forward 1: Reverse	1	0	00BH	○
P0.12	Acc time 1	0.1~3600s	0.1s	6s	00CH	○
P0.13	Dec time 1	0.1~3600s	0.1s	6s	00DH	○
P0.14	Reserved	-	-	-	00EH	*

F1 GROUP: Motor Parameter (total 11 items)						
Code	Name	Setting Scope	Min Unit	Defaulted Value	Address	Change
P1.00	Reserved	-	-	-	100H	*
P1.01	Motor poles	2~14	2	4	101H	×
P1.02	Rated power	0.4~1000kW	0.1KW	Power determination	102H	×
P1.03	Rated current	0.1~6553A	0.1A	Power determination	103H	×
P1.04	Current without load	0.1~6553A	0.1A	Power determination	104H	×
P1.05	Stator resistance	0.0~50.00%	0.01%	Power determination	105H	○
P1.06	Leakage inductance	0.0~50.00%	0.01%	Power determination	106H	○
P1.07	Rotor resistance	0.0~50.00%	0.01%	Power determination	107H	○
P1.08	Mutual inductance	0.0~2000.00%	0.1%	Power determination	108H	○

F1 GROUP: Motor Parameter (total 11 items)						
Code	Name	Setting Scope	Min Unit	Defaulted Value	Addresses	Change
P1.09	Rated slip frequency	0.00~20.00Hz	0.01Hz	0Hz	109H	○
P1.10	Auto tuning	0: Auto tuning disable 1: Stationary auto tuning 2: Rotating auto tuning	1	0	10AH	×

F2 Group: Start/Stop Parameter (Total 15 items)						
Code	Name	Setting Scope	Min Unit	Defaulted Value	Addresses	Change
P2.00	Reserved	-	-	-	200H	*
P2.01	Start frequency	0.20~60.00Hz	0.01Hz	0.5Hz	201H	○
P2.02	Start frequency hold time	0.0~10.0s	0.1s	0.0s	202H	○
P2.03 ~ P2.07	Reserved	-	-	-	203H~207H	*
P2.08	Stop modes	0: Decelerate to stop 1: Coast to stop 2: Deceleration + DC braking	1	0	208H	×
P2.09	Frequency threshold of DC braking	0.00~60.00Hz	0.01Hz	1.00Hz	209H	○
P2.10	DC brake delay time	0.00~10.00s	0.01s	0.00s	20AH	○
P2.11	DC Brake current	0.0 ~ 150.0% Inverter rated current	0.1%	120.0%	20BH	○
P2.12	DC Brake time at stop	0.0s No action; 0.1~60.0s Action	0.1s	0.5s	20CH	○

F2 Group: Start/Stop Parameter (Total 15 items)						
Code	Name	Setting Scope	Min Unit	Defaulted Value	Addresses	Change
P2.13	Dynamic braking	0: Disabled 1: Enable	1	0	20DH	×
P2.14	Reserved	-	-	-	20EH	*

F3 GROUP: Magnetic Flux Vector Control Parameters (total 15 items)						
Code	Name	Setting Scope	Min Unit	Defaulted Value	Addresses	Change
P3.00	Reserved	-	-	-	300H	*
P3.01	V/F freq F3	P3.03~P0.06	0.01Hz	0.00Hz	301H	×
P3.02	V/F voltage V3	P3.04~100%	0.1%	0.0%	302H	×
P3.03	V/F freq F2	P3.05~P3.01	0.01Hz	0.00Hz	303H	×
P3.04	V/F voltage V2	P3.06~P3.02	0.1%	0.0%	304H	×
P3.05	V/F freq F1	0.00~P3.03	0.01Hz	0.00Hz	305H	×
P3.06	V/F voltage V1	0~P3.04	0.1%	0.0%	306H	×
P3.07	Torque boost	0.0%~30.0%	0.1%	2.0%	307H	○
P3.08	Manual torque boost cutoff point	0.0%~50.0%	0.1%	10%	308H	○
P3.09 ~ P3.10	Reserved	-	-	-	309H ~ 30AH	*
P3.11	Compensation time	0.1~25.0s	0.1s	0.1s	30BH	×
P3.12	AVR function	0: null 1: Effect all long 2 : Null only deceleration	1	0	30DH	×

F3 GROUP: Magnetic Flux Vector Control Parameters (total 15 items)						
Code	Name	Setting Scope	Min Unit	Defaulted Value	Address	Change
P3.13	Reserved	-	-	-	30EH	*
P3.14	Motor stabilization factor	0~255	1	Power determination	30FH	○

F4 GROUP: Reserved Parameter (total 1)						
Code	Name	Setting Scope	Min Unit	Defaulted Value	Address	Change
P4.00~P4.10	Reserved	-	-	-	400H~40AH	*

F5 GROUP: Multi-function terminal (Total 22)						
Code	Name	Setting Scope	Min Unit	Defaulted Value	Address	Change
P5.00	Function of multi-function terminal X1	0: non-function 1: Forward run 2: Reverse run 3: MS frequency1 4: MS frequency2 5: MS frequency3	1	1	500H	×
P5.01	Function of multi-function terminal X2	6: External fault normally open input 7: External fault normally closed input 8: Failure reset input	1	2	501H	×
P5.02	Function of multi-function terminal X3	9: Forward jog 10: Reverse jog 11: Coast to stop input 12: Frequency increasing input 13: Frequency decreasing input	1	0	502H	×
P5.03	Function of multi-function terminal X4	14: PLC operation pause 15: Acc/Dec prohibit 16: 3-wire operation control	1	0	503H	×

F5 GROUP: Multi-function terminal (Total 22)						
Code	Name	Setting Scope	Min Unit	Default Value	Address	Change
P5.04	Function of multi-function terminal X5	17: External interrupt normally open input 18: External interruption normally closed input 19: DC injection braking input 20: Closeloop failure input 21: PLC failure input 22: Frequency setting method 1 23: Frequency setting method 2 24: Frequency setting method 3 25: Reserved 26: MS frequency 4 27: Terminal control mode is forcibly enabled 28: Control mode 1 29: Control mode 2 30-34: Reserved 35: External stop command 36: Reserved 37: Inverter operation prohibition 38-39: Reserved 40: Clear auxiliary reference frequency	1	0	504H	×
P5.04	Function of multi-function terminal X5	41: Reset PLC Stop status 42: Clear counter's record 43: Signal of triggering counter 44-45: Reserved	1	0	504H	×
P5.05~P5.07	Reserved	-	-	-	505H~507H	*

F5 GROUP: Multi-function terminal (Total 22)						
Code	Name	Setting Scope	Min Unit	Default Value	Address	Change
P5.08	Terminal control mode	0: Two lines 1 1: Two lines 2 2: Three lines 1 3: Three lines 2	1	0	508H	×
P5.09~P5.11	Reserved	-	-	-	509H~50BH	*
P5.12	Filter constant	0.01~50.00	0.01s	0.50s	50CH	○
P5.13	Reserved	-	-	-	50DH	○
P5.14	Ratio of Min. input of curve1	0.0%~P5.16 (Min given value 1/benchmark value 10V/20mA/P5.13)	0.1%	2.0%	50EH	○
P5.15	Frequency corresponds to min. input of curve1	0.00~P0.09	1	0.00Hz	50FH	○
P5.16	Ratio of Max. input of curve 1	P5.14 ~ 100.0% (Max given value 1/benchmark 10V/20mA/P5.13)	0.1%	100.0%	510H	○
P5.17	Frequency corresponds to max. input of curve1	0.00~P0.09	1	50.00 Hz	511H	○
P5.18~P5.21	Reserved	-	-	-	512H~515H	*

F6 Group: Output Terminal Control Parameter (total 18)						
Code	Name	Setting Scope	Min Unit	Default Value	Addresses	Change
P6.00	Open collector output terminal Y1	0: Inverter Run Signal (RUN) 1: Frequency arrive signal (FAR) 2: Frequency detection threshold (FDT1)	1	0	600H	×
P6.01	Reserved	3-4: Reserved	-	-	601H	*
P6.02	Relay 1 output function	5: Undervoltage lock-up signal (LU) 6: External stop command (EXT)	1	16	602H	×
P6.03	Reserved	7: Higher limit of frequency (FHL) 8: Lower limit of frequency (FLL) 9: Zero speed running 10: Completion of simple PLC operation 11: PLC cycle completion indication 12: Preset counting value arrival 13: Specified counting value arrival 14: Inverter run status 15: Inverter is ready (RDY) 16: Inverter fails 17: Extended function 1 of host 18: Reserved 19: Preset operation time out 20: Reserved	-	-	603H	*

F6 Group: Output Terminal Control Parameter (total 18)						
Code	Name	Setting Scope	Min Unit	Default Value	Addresses	Change
P6.04	AO output function	0: Output frequency before slip compensation (0~Max Output frequency) 1: Output frequency after slip compensation (0~Max Output frequency) 2: Set frequency (0~Max Output frequency) 3: Output current (0~2 times of rated current of Inverter) 4: Output current (0~2 times of rated current of motor) 5: Output torque (0~2 times of rated torque of motor) 6: Output voltage (0~1.2times of rated voltage of Inverter) 7: Bus voltage (0~800V) 8: Reserved 9: AI (0~10V/0~20mA) 10: Output power (0~2 times of rated power) 11: Extended function2 of host (0~65535) 12: Setting of potentiometer (0~10V)	1	0	604H	○
P6.05~ P6.06	Reserved	-	-	-	605H ~606H	*

F6 Group: Output Terminal Control Parameter (total 18)						
Code	Name	Setting Scope	Min Unit	Default ed Value	Address	Change
P6.07	Analog output range	LED Units: AO offset choice 0: 0~10V or 0~20mA 1: 2~10V or 4~20mA	1	00	607H	○
P6.08	AO output gain	0.0~200.0%	0.1 %	100.0%	608H	○
P6.09~P6.10	Reserved	-	-	-	609H~60AH	*
P6.11	Preset counting value	P6.12~65535	1	0	60BH	○
P6.12	Specified counting value	0-P6.11	1	0	60CH	*
P6.13	Freq arrival detection range (FAR)	0.00~650.0Hz	0.01 Hz	2.50Hz	60DH	○
P6.14	FDT1 level	0.00~650.0Hz	0.01 Hz	50.00Hz	60EH	○
P6.15	FDT1 lag	0.00~650.0Hz	0.01 Hz	1.00Hz	60FH	○
P6.16~P6.17	Reserved	-	-	-	610~611H	*
F7 Group: Process Closloop PID Parameters (Toal 34)						
Code	Name	Setting Scope	Min Unit	Default ed Value	Address	Change
P7.00	Close-loop PID control	0: Non Closloop PID control run 1: Closloop PID control run	1	0	700H	×

F7 Group: Process Closloop PID Parameters (Toal 34)						
Code	Name	Setting Scope	Min Unit	Default ed Value	Address	Change
P7.01	Reference input method	0:Digital setting(P7.05 value) 1: Reserved 2: Reserved 3: LED keypad potentiometer given 4: Reserved	1	0	701H	○
P7.02	Reserved	-	-	-	702H	*
P7.03	Input filter	0.01~50.00s	0.01s	0.5s	703H	○
P7.04	Feedback filter	0.01~50.00s	0.01s	0.5s	704H	○
P7.05	Digital referenceinput	0.00~10.00V	0.01	0.00	705H	○
P7.06	Reserved	-	-	-	706H	*
P7.07	Reserved	-	-	-	707H	*
P7.08	Min input	0.0%~P7.10	0.1%	0.0	708H	○
P7.09	Feedback of Min input	0.0~100.0%	0.1%	0.0%	709H	○
P7.10	Max input	P7.08~100.0%	0.1%	100.0%	70AH	○
P7.11	Feedback of Max input	0.0~100.0%	0.1%	100.0%	70BH	○
P7.12	Proportional gain Kp	0.000~9.999	0.001	0.050	70CH	○
P7.13	Integral gain Ki	0.000~9.999	0.001	0.050	70DH	○
P7.14	Sampling cycle Ts	0.01~50.00s	0.01s	0.50s	70EH	○
P7.15	Error limit	0.0~20.0%	0.1%	2.0%	70FH	○
P7.16	Closed-loop regulation characteristics	0: Positive logic 1: Negative logic	1	0	710H	×
P7.17~P7.28	Reserved	-	-	-	711H~71CH	*
P7.29	PID Feedback break line detection	0.0~80.0%	0.1%	0.0%	71DH	×

F7 Group: Process Closloop PID Parameters (Toal 34)						
Code	Name	Setting Scope	Min Unit	Default ed Value	Address	Change
P7.30	PID Feedback break line detection time	0~999.9s	1s	0.0s	71EH	×
P7.31~ P7.33	Reserved	-	-	-	71FH ~721H	*

F8 GROUP: Multi Parameters (total 21)						
Code	Name	Setting Scope	Min Unit	Defaulted Value	Address	Change
P8.00	MS freq 1	Low limit frequency ~ Upper limit frequency	0.01Hz	5.00Hz	800H	○
P8.01	MS freq 2			10.00Hz	801H	
P8.02	MS freq 3			20.00Hz	802H	
P8.03	MS freq 4			30.00Hz	803H	
P8.04	MS freq 5			40.00Hz	804H	
P8.05	MS freq 6			45.00Hz	805H	
P8.06	MS freq 7			50.00Hz	806H	
P8.07	MS freq 8	Low limit frequency ~ Upper limit frequency	0.01Hz	50.00Hz	807H	○
P8.08	MS freq 9				808H	
P8.09	MS freq 10				809H	
P8.10	MS freq 11				80AH	
P8.11	MS freq 12				80BH	
P8.12	MS freq 13				80CH	
P8.13	MS freq 14				80DH	
P8.14	MS freq 15				80EH	
P8.15~ P8.20	Reserved	-	-	-	80FH~ 814H	*

F9 GROUP: Enhanced Function Parameters (total 51)						
Code	Name	Setting Scope	Min Unit	Default Value	Address	Change
P9.00~P9.01	Reserved	-	-	-	900H~901H	*
P9.02	Carrier wave frequency	0.7 kHz~15.0kHz	0.1kHz	6.0kHz	902H	×
P9.03	CWF auto adjustment	0: no action 1: action	0	0	903H	×
P9.04	Reserved	-	-	-	~904H	*
P9.05	Jog frequency	0.10 Hz~P0.07	0.01Hz	5.00Hz	905H	○
P9.06	Reserved	-	-	-	906H	*
P9.07	Jog Acc time	0.1~60.0s	0.1	6s	907H	○
P9.08	Jog Dec time	0.1~60.0s	0.1	6s	908H	○
P9.09~P9.14	Reserved	-	-	-	909H~90EH	*
P9.15	Positive or negative logic of terminal	LED Units: Bit0~Bit3: X1~X4 LED Tens: Bit0: X5 Bit1~Bit3: Reserved LED Hundreds: Bit0 ~ Bit3: Reserved, Reserved,Y1, Reserved LED Thousands: Reserved BIT Settings: 0: Valid when X and common connected, disconnect is invalid; 1: Invalid when X and common connected, disconnect is valid;	1	000	90FH	○
P9.16~P9.17	Reserved	-	-	-	910H~911H	*

F9 GROUP: Enhanced Function Parameters (total 51)						
Code	Name	Setting Scope	Min Unit	Default Value	Address	Change
P9.18	Digital auxiliary reference control	LED Units: Storage control 0: power failure storage auxiliary frequency 1: power failure no storage auxiliary frequency LED Tens: Halt frequency control 0: Maintain auxiliary frequency after halt 1: Reset frequency after halt LED Hundreds: Auxiliary given superposition polarity	1	000	912H	○
P9.18	Digital auxiliary reference control	0: Positive polarity 1: Negative polarity	1	000	912H	○
P9.19~P9.21	Reserved	-	-	-	913H~915H	*
P9.22	Cooling fan	0: automatic run 1: run when power on	1	0	916H	×
P9.23~P9.29	Reserved	-	-	-	917H~91DH	*
P9.30	Conditions of restart after power failure	0: invalid 1: valid	1	0	91EH	×
P9.31~P9.33	Reserved	-	-	-	91FH~921H	*
P9.34	Terminal filter time	0.5~100.0ms	0.1 ms	7.5 ms	922H	×

F9 GROUP: Enhanced Function Parameters (total 51)						
Code	Name	Setting Scope	Min Unit	Default Value	Address	Change
P9.35	Current count value	0~65535	1	0	923H	○
P9.36	Under-voltage setting	75.0%~135.0%	0.1%	90.0%	924H	×
P9.37~P9.42	Reserved	-	-	-	925H~92AH	*
P9.43	PWM model optimization	LED Units: Carrier selection 0: Set the carrier 1: Default carrier LED Tens: Carrier force 0: No force 1: Force LED Hundreds: Modulation mode 0 : Fivections/seven sectionsautomatic swich 1: Five sections 2: seven sections LED Thousands: Quick AVR 0: Close 1、 Open Note: 0: No display 1: Display	1	0011	92BH	×
P9.44~P9.50	Reserved	-	-	-	92CH~932H	*

FA display Parameters (total 7)						
Code	Name	Setting Scope	Min Unit	Default Value	Address	Change
PA.00	LED display parameter selection 1	Binary set: 0: No displaying 1: Displaying LED Units: Bit0: Output frequency(before compensation,Hz) Bit1: Output frequency (after compensation,Hz) Bit2: Setting frequency(Hz blink) Bit3: Output current(A) LED Tens: Bit0: Run speed(RPM) Bit1: Setting speed(RPM) Bit2: Reserved Bit3: Reserved LED Hundreds: Bit0: Output power Bit1: Output torque (%)	1	00D	A00H	○
FA01	LED display parameter selection 2	Binary set: 0: No Display 1: Display LED Units: Bit0: Output voltage(V) Bit1: Barbus voltage Bit2: Reserved Bit3: AI(V) LED Tens: Bit0: Analog closeloop feedback (%) Bit1: Analog closeloop setting(%) Bit2: External count Bit3: Terminal state LED Hundreds: Bit0: Reserved Bit1: Setting pressure	1	000	A01H	○

FA display Parameters (total 7)						
Code	Name	Setting Scope	Min Unit	Default Value	Address	Change
PA.02	Display -ed paramet -er at stop state	Binary set: 0: No display 1: Display LED Units: Bit0 : Set frequency (Hz) Bit1: External count Bit2: RUN SPEED (RPM) Bit3: Set speed (RPM) LED Tens: Bit0: Reserved Bit1: Reserved Bit2: Reserved Bit3: AI(V) LED Hundreds: Bit0: Analog closeloop feedback (%) Bit1: Analog closeloop setting (%) Bit2: Reserved Bit3: Reserved LED Thousands: Bit0: Terminal status Bit1: Barbus voltage	1	2001	A02H	○
PA.03~ PA.06	Reserved	-	-	-	A03H~ A06H	*

FB: Communication Parameters (total 6)						
Code	Name	Setting Scope	Min Unit	Default Value	Address	Change
PB.00	Communica -tion configuration	LED Units : Baud rate selection 0: 1200bps 1: 2400bps 2: 4800bps 3: 9600bps 4: 19200bps 5: 38400bps	1	4	B00H	×

FB: Communication Parameters (total 6)						
Code	Name	Setting Scope	Min Unit	Default ed Value	Address	Change
PB.00	Communication configuration	LED Tens: Data format 0: 1-8-2-N format, RTU 1: 1-8-1-E format, RTU 2: 1-8-1-O format, RTU LED Hundreds: Virtual input terminals 0: Invalid 1: Valid	1	4	B00H	×
PB.01	Local address	0~247, 0 is broadcast address	1	1	B01H	×
PB.02	Communication timeout detect	0.0~1000s Don't inspect is beyond time at 0	0.1	0.0s	B02H	×
PB.03	Response delay	0~1000ms	1	5ms	B03H	×
PB.04	Master-slave selection	0: Slave machine 1: Master machine	1	0	B04H	×
PB.05	Ratio of slave inverter setting frequency	0.0~10.00	0.01	1.00	B05H	×

FC: Professional function parameters 1 (total 15)						
Code	Name	Setting Scope	Min Unit	Default ed Value	Address	Change
PC.00~PC.14	Reserved	-	-	0	C00H~C0EH	*

FD Group: Professional function parameters 2 (total 31)						
Code	Name	Setting Scope	Min Unit	Default Value	Address	Change
PD.00	Simple PLC mode	LED Units: PLC run mode 0: no-action 1: Stop after ending single running 2: keep the final value when single running ends 3: Continuous circulation LED Tens: Start mode 0: Run from the first stage 1: Continue to run from stage frequency of the break time 2: Continue to run from run frequency of the break time LED Hundreds: Power failure storage 0: No memory 1: Memory LED Thousands: Select the unit of stage time 0: Second 1: Minute	1	0000	D00H	×
PD.01	Stage 1 setting	LEDUnits: 0: Select multi frequency 1 (P8.00) 1: Frequency depends on the function code of P0.02 LED Tens: 0: Forward 1: Reverse 2: Subject to run command	1	00	D01H	○
PD.02	Stage 1 run time	0.0~6500 s(min)	0.1	20.0s	D02H	○

FD Group: Professional function parameters 2 (total 31)						
Code	Name	Setting Scope	Min Unit	Default ed Value	Address	Change
PD.03	Stage 2 setting	LED Units: 0: Select mulit frequency 2(P8.01) 1: Frequenecy depends on thefunction code of P0.02 LED Tens: 0: Forward 1: Reverse 2: Subject to run command	1	00	D03H	○
PD.04	Stage 2 run time	0.0~6500 s(min)	0.1	20.0s	D04H	○
PD.05	Stage 3 setting	LED Units: 0: Select mulit frequency 3(P8.02) 1: Frequenecy depends on thefunction code of P0.02 LED Tens: 0: Forward 1: Reverse 2: Subject to run command	1	00	D05H	○
PD.06	Stage 3 run time	0.0~6500 s(min)	0.1	20.0s	D06H	○
PD.07	Stage 4 setting	LED Units: 0: Select mulit frequency 4(P8.03) 1: Frequenecy depends on thefunction code of P0.02 LED Tens: 0: Forward 1: Reverse 2: Subject to run command	1	00	D07H	○
PD.08	Stage 4 run time	0.0~6500 s(min)	0.1	20.0s	D08H	○

FD Group: Professional function parameters 2 (total 31)						
Code	Name	Setting Scope	Min Unit	Default Value	Address	Change
PD.09~PD.30	Reserved	-	-	-	D09H~D1EH	*

FE GROUP Reserves 21 parameters

FL Group: Fault Protection Parameters (total 22)						
Code	Name	Setting Scope	Min Unit	Default Value	Address	Change
PL.00	Motor overload protection	0: Disable 1: Common motor (low speed compensation) 2: Variable frequency motor (No low speed compensation)	1	2	1100H	×
PL.01	Motor overload protection factor	20.0~110%	0.1%	100.0%	1101H	×
PL.02	stall overvoltage	0: Disable 1: Enable	1	1	1102H	×
PL.03	Stall overvoltage point	110.0~150.0%	0.1%	140.0%	1103H	×
PL.04~PL.06	Reserved	-	-	-	1104H ~ 1106H	*
PL.07	Automatic current limit threshold	20.0~200.0%	0.1%	160.0%	1107H	×
PL.08	Reserved	-	-	-	1108H	*

FL Group: Fault Protection Parameters (total 22)						
Code	Name	Setting Scope	Min Unit	Defaulted Value	Address	Change
PL.09	Action mode of autocurrent limit	0: Constant speed invalid 1: Constant speed effective 2: Automatic current limit valid in run state 1 3: Reserved 4: Reserved 5: Automatic current limit valid in run state 2	1	5	1109H	×
PL.10~PL.13	Reserved	-	-	-	110AH ~110DH	*
PL.14	Fault type of the first two time	0: No abnormal records 1: Overcurrent run at acceleration (F.oC1)	1	0	110EH	*
PL.15	Fault type of the previous time	2: Overcurrent run at deceleration (F.oC2) 3: Overcurrent run at constant speed (F.oC3) 4: Overvoltage run at acceleration (F.oU1) 5: Overvoltage run at deceleration (F.oU2) 6: Overvoltage run at constant speed (F.oU3) 7: Overvoltage at control voltage (F.PoU) 8: Reserved 9: Phase loss at output (F.oPL)	1	0	110EH	*

FL Group: Fault Protection Parameters (total 22)						
Code	Name	Setting Scope	Min Unit	Defaulted Value	Address	Change
PL.16	Fault type of the lasttime	10: Power module protection (F.FAL) 11: Overheat on heatsink 1 (F.oH1) 12: Reserved 13: Overload on Inverter (F.oL1) 14: Overload on motors (F.oL2) 15: External fault(F.Ed) 16: EEPROM read-write error (F.EEP) 17: Serialport communication abnormal (F.485) 18: Reserve 19: Abnormal circuit/ currentin spection (F.Ct) Hall or amplifying circuit 20: System interference (F.CPU) 21: Reserve 22: Reserve 23: Reserve 24: Abnormal auto tuning (F.tU) 25: Reserve 26: feedback off line (F.LoF) 27: Reserve 28: Reserve 29: Reserve	1	0	110FH	*
PL.17	Bus volage at the last fault	0~6553V	1V	0V	1111H	*

FL Group: Fault Protection Parameters (total 22)						
Code	Name	Setting Scope	Min Unit	Defaulted Value	Address	Change
PL.18	Output current at the last fault	0.0~6553A	0.1A	0.0A	1112H	*
PL.19	Freq at the last fault	0.00Hz~650.0Hz	0.01Hz	0.00Hz	1113H	*
PL.20	Heatsink 1 temperature at the last fault	0.0~120.0℃	0.1	0℃	1114H	*
PL.21	Reserved	-	-	-	1115H	*

FN Group: Parameter Protection (total 4)						
Code	Name	Setting Scope	Min Unit	Default ed Value	Address	Change
PN.00	Preset operation time	0~65.535 kHour	0.001kHour	0	1200H	○
PN.01	Total operation time	0~65.535 kHourh	0.001kHour	0	1201H	*
PN.02	Temperature of heatsink 1	0.0~120.0℃	0.1	0℃	1202H	*
PN.03	Reserved	-	-	-	1203H	*

FP Group: Parameter Protection (Total 7)						
Code	Name	Setting Scope	Min Unit	Default ed Value	Address	Change
PP.00	User password	0000~9999	0	0000	1300H	○

FP Group: Parameter Protection (Total 7)						
Code	Name	Setting Scope	Min Unit	Default Value	Address	Change
PP.01	Write-in protection	0: All parameters allow to revise 1: Only frequency and the function code can be revised. 2: Only the function code can be revised.	1	0	1301H	○
PP.02	Parameter initialization	0: No action 1: Eliminate malfunction records (PL.14~PL.19) 2: Restore factory parameters	1	0	1302H	×
PP.03~PP.06	Reserved	-	-	-	1303H~1306H	*
FU Group: Factory Function Parameter						
Code	Name	Setting Scope	Min Unit	Default Value	Address	Change
PU.00	Password	****	1	Factory setting	1400H	-


9 Communication Protocol

9.1 Communication Mode

1. Inverter communication protocol is Modbus protocol, and supports the common register read and write.
2. Drive as a slave, master-slave point to point communication. A Master drive uses broadcast address to send a command, the slave does not answer.
3. In the case of long distance or multi-machine communication, we recommend to connect the the master station signal GND with the drive signal "GND", in order to improve the communication of immunity

9.2 Protocol Format

Modbus protocol supports RTU mode, the corresponding frame format is as follows,

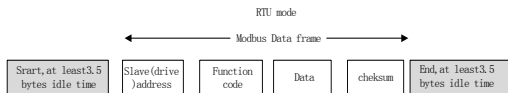

Modbus adopts "Big Endian" encoding, firstly transmitting high byte, then low byte.

RTU Mode: In RTU mode, idle time between frames will take the higher one among Modbus internal conventional values and function code setting values. The conventional Min idle frames inside Modbus is as follows: The idle time passed the bus by the header and trailer is not less than 3.5 byte time.

Data verification uses CRC-16. The entire information participates in verification, High&low bytes of checksum can be sent after exchanging.

Specific CRC verification can refer to the example associated with the protocol. It is worth noting, the idle among frames should keep at least 3.5 bytes at the bus. The start and end idle among frames at the bus need not to be accumulated

Through the function codes Drives can set different response delay to suit the specific application needs of various master stations. In RTU mode, the actual response delay is not less than 3.5 bytes intervals.

9.3 Protocol Function

Modbus main function is to read and write parameters. Different function codes apply to different operation request. Inverter Modbus protocol supports the following function codes:

Function Codes	Description
0x03	Read inverter function code parameter and operating condition parameters
0x06	Modify single inverter function codes or control parameters , not saved after power failure
0x10	Rewrite multiple function codes or control parameters , not saved after power failure
0x41	Rewrite single drive or control parameters ,saved after power failure

Parameters of the inverter (Function code, control parameters and status parameters) are mapped to Modbus read & write register. Read & write nature and scope of function code parameters comply with specifications in the user manual. Group numbers of functions codes are mapped to the high byte of register address. The group index is mapped to the low byte of register address. Control parameters and status parameters of the inverter are virtualized as inverter function code groups. Correspondence relation between the register address high byte and function codes group number is as follows

P0 Group: 0x00; P1 Group: 0x01; P2 Group: 0x02; P3 Group: 0x03;

P4 Group: 0x04; P5 Group: 0x05; P6 Group: 0x06; P7 Group: 0x07; P8 Group: 0x08; P9 Group: 0x09; PA Group: 0x0A; PB Group: 0x0B; PC Group: 0x0C; PD Group: 0x0D; PE Group: 0x0E; PL Group: 0x11; PN Group: 0x12; PP Group: 0x13; PU Group: 0x14; Inverter control parameters Group: 0x32; Inverter state parameter Group: 0x33。 E.g. the inverter function code parameter P3.02 maps to register address 0x302. The function code parameter PB.01 maps to the register address 0xB01.

As already described the formatting of an entire data frame, the following will focus on the Modbus protocol function codes and the format and meaning of the data. It refers to the content of "function code" and "Data" section in the data frame format. The two parts compose a Modbus application layer protocol data unit. The application-layer protocol data unit mentioned below refers to these two parts.

The application layer protocol data unit for reading inverter parameters is as follows:

Application layer protocol Data Unit	Data length (number of bytes)	Values or range
Function code	1	0x03
Initial register address	2	0x0000~0xFFFF
Register number	2	0x0001~0x0004

Response format as below:

Application layer protocol Data Unit	Data length (number of bytes)	Values or range
Function code	1	0x03
Read number of bytes	1	2* Register number
Read content	2* Register number	

If the operation fails, error code and exception code will be responded.

The error code is “function code + 0x80”, exception code denotes the cause of the error. Exception code listed below:

exception code	Description
0x1	Illegal function code
0x2	Illegal register address.
0x3	Data error, i.e., data more than upper limit or lower limit.
0x4	Operation failure of slave drive (including error caused by invalid data in the range of upper limit and lower limit)
0x5	Command is valid and in process, mainly used for storing data to the nonvolatile storage.
0x6	Slave drives are busy, please try again later, mainly used for storing data into the non-volatile storage
0x18	Information frame error: including information length error and calibration error
0x20	Parameters cannot be modified
0x22	Parameters are protected by password.

Single drive parameter rewrite application layer protocol data unit as follows:

Request format:

Application layer protocol Data Unit	Data length (number of bytes)	Values or range
Function code	1	0x06
Register address	2	0x0000~0xFFFF
Register contents	2	0x0000~0xFFFF

Response format is as follows:

Application layer protocol Data Unit	Data length (number of bytes)	Values or range
Function code	1	0x06
Register address	2	0x0000~0xFFFF
Register contents	2	0x0000~0xFFFF

If the operation fails, error code and exception code will be responded.

The error code is “function code + 0x80”, exception code refers to the previous description.

Inverter control parameters can accomplish functions such as start, stop, operation frequency, etc. By retrieving the inverter state parameter, users can obtain operation parameters such as frequency, output current and output torque. Specific frequency converter control parameters and status parameters enumerated below:

Inverter control parameter index

Register address	Name of parameter	Power-down save?
0x3200	Control command word	No
0x3201	Main setting	Yes
0x3202	Operation frequency setting	Yes
0x3203	Digital closed-loop given	Yes
0x3204	Reserved	No
0x3205	Analog output AO setting	No
0x3206	Reserved	No
0x3207	Digital output Y1 setting	No
0x3208	Set the frequency ratio	No
0x3209	Virtual terminal control setting	No
0x320A	Set acceleration time 1	Yes
0x320B	Set deceleration time 1	Yes

B1000 inverter state parameter index

Register address	Parameter name
0x3300	Running status word 1
0x3301	The practical operation value of the current main setting
0x3302	Slave drive model
0x3303	Inverter type
0x3304	Software version
0x3305	Present running frequency
0x3306	Output current
0x3307	Output Voltage
0x3308	Output Power
0x3309	Running RPM
0x330A	Reserved

Register address	Parameter name
0x330B	Analog closed-loop feedback
0x330C	Busbar voltage
0x330D	External counter
0x330E	Output torque
0x330F	Switch input and output terminals status : BIT0~15=X1~X5, NC,NC,NC,Y1, NC, TC,NC, FAN, BRAKE, NC, NC
0x3310	Preserve
0x3311	Operation frequency after compensation
0x3312	The first run failure
0x3313	The second run failure
0x3314	The third(last time) run failure
0x3315	Operation frequency setting
0x3316	Running speed setting
0x3317	Analog closed-loop given
0x3318	Reserved
0x3319	Reserved
0x331A	AI
0x331B	Reserved
0x331C	Set acceleration time 1
0x331D	Set deceleration time 1
0x331E	Command given channel: 0: Panel control 1: Terminal control 2: Serial port control
0x331F	Inverter status word 2
0x3320	Frequency given channel: 0: Digit given 1, Keypad $\wedge \vee$ adjustment 1: Digit given 2: Terminal UP/DN adjustment 2: Digit given 3: Serial port 3: Reserved 4: AI Analog given 5: Reserved

Inverter control word bits are defined as follows:

Control word (bit)	Value	Function	Description
Bit2、1、0	111B	Run Command	Start the inverter
	110B	Mode 0 stop	Stop according to setting deceleration time
	101B	Mode 1 stop	Free stop
	011B	Mode 2 stop	Reserved
	100B	External fault stop	Freestop, Inverter display external fault
	Rest	No command	
Bit3	1	Reverse	Run setup effective operation direction (Inching mode is invalid)
	0	Forward	
Bit4	1	Inching to run forward	
	0	Inching to stop the forward run	
Bit5	1	Inching to reverse	
	0	Inching to stop reverse	
Bit6	1	Allow acceleration/ deceleration	Reserved
	0	Forbidden for acceleration/ deceleration	
Bit7	1	Host computer control valid	The control word sent by the current FC is effective
	0	Host computer control invalid	The control word sent by the current FC is invalid
Bit8	1	The main set effective	Enable the main setting
	0	The main set is invalid	Ban the main setting
Bit9	1	Failure reset effective	
	0	Failure reset is invalid	

Control word (bit)	Value	Function	Description
Bit15~Bit10	000000 B	Reserved	

Note : Inching to run given (Bit4, Bit5) shall not be effective simultaneously with the control word Bit0 ~ Bit2 !

The inverter status word 1 bits are defined as follows:

Status word (bit)	Value	Function	Remark
Bit0	1	Inverter operation	
	0	Inverter stop	
Bit1	1	Inverter reverse	
	0	Inverter forward	
Bit2	1	Reach main setting	
	0	Not reach main setting	
Bit3	1	Allow communciation control	
	0	Ban communciation control	
Bit7~4	0000B	Reserved	
Bit15~8	00~0xFF	Faule code	0: Normal ; None 0: Fault, Specific fault codes details refer to the inverter user manual E.g. ,motor overload F.oL2 will be the fault code of 0x0E, undervoltage will be 0x1F.

9.4 Instruction

1、Inverters cannot communicate during the restoring default parameters and parameter identification phase, after that communication back to be

normal.

2、Inverter internal parameters P1.10, PP.03 cannot be modified through communication setting.

3、Writing FP. 00 can verify the user password. after the success of the authentication of password, the host FC gets permission of accessing the inverter parameters. After finishing the accessing, writing an invalid password to FP. 00 can shut down the access permissions.

4、The same function setting for Multiple multi-function input terminals function will cause dysfunction, which situation should be avoided when users modify multi-function terminal function through the MODBUS protocol.

Application Examples:

Rewrite the 1 # Inverter operation frequency to be 35.00 HZ (internally denote to be 3500), command as follows:

	address	Function Code	Register address	Register content	Checksum
Request	0x01	0x06	0x3202	0x0DAC	0x225F
Response	0x01	0x06	0x3202	0x0DAC	0x225F

Start the 1 # Inverter to run forward, set the speed as 50.00 HZ (internally denote to be 5000), command as follows:

	address	Function Code	Register address	Register number	Register content bytes	Register content	Checksum
Request	0x01	0x10	0x3200	0x0002	0x04	0x01C7, 0x1388	0x0399
Response	0x01	0x10	0x3200	0x0002	none	none	0x4F70

Read 1 # Inverter output current, the Inverter responds output current of 30.0 A (internally denote to be 300):

	address	Function Code	Register address	Register number or read number of bytes	Register content	Checksum
Request	0x01	0x03	0x3306	0x0001	none	0x6B4F
Response	0x01	0x03	none	0x02	0x012C	0xB809

9.5 The scaling rule of Inverter

A) The calibration of frequency is 1:100

To make inverter running at 50 hz, the main setting should be 0 x1388 (5000) .

B) The calibration of time is 1:10

To make the acceleration time to be 30s, the function code setting should be 0x012c (300) .

C) The calibration of current is 1:10

If the feedback current of inverter is 0x012c, the current of the inverter is 30A.

D) Output power is its absolute value.

E) Other issues(such as input and output terminals, etc.), please refer to the user manual.

Version 1.0

Revision date January 05, 2017

Nowforever provides customer with technical support.

Users may contact the nearest Nowforever sales office or service center.

Copyright by Nowforever electronics and technology Co., Ltd

All rights reserved. The contents in this document are subject to change without notice.

Address: 1st and 2nd Floor; C3 Building; Fuxinlin Industrial Park of
Hangcheng Industrial Zone; Xixiang Street; Baoan District;
Shenzhen China.

Home Page: www.nowforever.cn

Customer Service Hotline: 400-7165-699; +86 755 61527121